

Version 4.0 English

- when it has to be **right**



Introduction	Builder 2			
Introduction				
Purchase	Congratulations on the purchase of a Builder series instrument.			
	This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "16 Safety Directions" for further informa- tion. Read carefully through the User Manual before you switch on the product.			
Product identification	The type and the serial number of your product are indicated on the type plate. Enter the type and serial number in your manual and always refer to this information when you need to contact your agency or Leica Geosystems authorized service work- shop.			
	Туре:			
	Serial No.:			

Symbols

The symbols used in this manual have the following meanings:

Туре	Description
▲ Danger	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
Marning	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
Caution	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury and/or appreciable material, financial and environ- mental damage.
(Ja	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

Trademarks

• Windows is a registered trademark of Microsoft Corporation All other trademarks are the property of their respective owners.

Introd	uction
	action

4

Validity of this Description manual General This manual applies to all Builder instruments. Where there are differences between the various models they are clearly described. Telescope In regard to the instrument EDM, a Builder instrument may be equipped with one of two types of telescopes, which offer the same performance but differ in some technical details. The two different types can be distinguished by a rectangular (telescope type 1) or round (telescope type 2) shaped element, which is visible in the centre of the objective lens. Where there are technical differences between the two telescope types they are marked by the following pictograms, referring to the first or second type described above:

	Description
\bigcirc	 Telescope Type 1 Builder R and RM allow only measurements without prisms. When using this EDM type a narrow visible red laser beam is used to measure distances.
\odot	 Telescope Type 2 When measuring distances to a reflector with EDM type "fine" or "fast" this telescope type uses a wide visible red laser beam, which emerges coaxially from the telescope's objective. Only possible with the Builder M power and RM power. Builder RM power can measure distances without prisms. When using the EDM type "red dot" a narrow visible red laser beam is used to measure distances.

Table of Contents		Builder	6
Table of Co	nte	nts	
In this manual	Ch	apter	Page
	1	How to Use this Manual	12
	2	Technical Terms and Abbreviations	14
	3	Description of the System	20
		 3.1 Instrument Models 3.2 Set Contents 3.3 Instrument Components 3.4 Power Supply 3.5 Software Concept 	20 21 23 25 26
	4	User Interface	28
		 4.1 Keyboard 4.2 Screen 4.3 Tab Bar 4.4 Icons 4.5 Symbols 	28 32 34 35 36

5	Opera	ation	38
	5.1	Selection of Language	38
	5.2	Instrument Setup	39
	5.3	Instrument Battery	47
	5.4	Distance Measurement	50
		5.4.1 General	50
		5.4.2 Measurement with Red Dot	51
		5.4.3 Measurement with Fine or Fast	53
	5.5	CPR105 Flat Prism	54
	5.6	CPR111 BUILDER Prism, True-Zero Offset	55
6	Confi	guration Mode	56
	6.1	Overview	56
	6.2	Accessing	57
	6.3	How to Make a Setting	68
7	Theod	lolite Mode	70
	7.1	Overview	70
	7.2	Accessing	71
	7.3	How to Set Horizontal Angle to 0.000	73
	7.4	How to Set Any Horizontal Angle	74
	7.5	Quick Setting of Horizontal Angle and Vertical Angle Direction	
		Measurement	75

Table of Contents				Builder	8
	8	Progr	am Mode	, for Builder R, RM, M power and RM power	78
		8.1	Overvie	W	78
		8.2	Accessi	ng	79
		8.3	Pointse	arch	80
		8.4	Measur	e and Record	82
	9	Stati	on Setup,	for Builder R, RM, M power and RM power	84
		9.1	Overvie	W	84
		9.2	Setup C	option 1: Establish Control Line	86
			9.2.1	General	86
			9.2.2	Establish Control Line - Over 1 st Point	87
			9.2.3	Establish Control Line - Anywhere	88
		9.3	Setup C	ption 2: Establish Coordinates	91
			9.3.1	General	91
			9.3.2	Establish Coordinates - Over Known Point	92
			9.3.3	Establish Coordinates - Anywhere	94
		9.4	Setup C	Option 3: Establish Height	96
			9.4.1	General	96
			9.4.2	Height Transfer	97

10	Аррис	ation Programs, for Builder R, RM, M power and RM power	98
	10.1	Overview	98
	10.2	Layout	100
	10.3	As Built	104
	10.4	Angle & Distance	107
	10.5	Tie Distance	109
	10.6	Area plane (tilt) & Volume	112
	10.7	Hidden Point (optional)	115
	10.8	COGO (optional)	119
	10.9	Layout Line/Arc/Spiral (optional)	128
	10.10	Measure & Descriptor	134
11	Data N	Nanagement Mode, for Builder RM, M power and RM power	136
	11.1	Overview	136
	11.2	Accessing	137
	11.3	Jobs	139
	11.4	Fixpoints	141
	11.5	Measurements	144
	11.6	Result	146
	11.7	Communication Parameters	147
	11.8	Data Transfer	150
	110	Pin Accimpont	151
	11.9	FITASSIGNMENT	101

20.0

. .

.

- -

.. ..

-

~~

Table of Contents	Builder				
	12 EDM 9	Settings	152		
	12.1	EDM	152		
	12.2	PPM	156		
	13 System Info and Instrument Protection				
	13.1	System Info	158		
	13.2	Instrument Protection (PIN)	161		
	14 Check & Adjust				
	14.1	Overview	164		
	14.2	Preparation	166		
	14.3	Combined Adjustment of Hz Collimation (c), Vertical Index (i) and			
		Compensator Index (I, t) Errors	167		
	14.4	Adjustment of the Circular Level	172		
	14.5	Adjustment of the Laser Plummet	174		
	14.6	Service of the Tripod	177		
	14.7	Inspection of the Red Laser Beam, for Builder R-, RM- and			
		RM power	178		
	14.8	Adjustment of the Vertical Line of the Reticule, for Builder T	180		
	15 Care and Transport				
	15.1	Transport	182		
	15.2	Storage	184		
	15.3	Cleaning and Drying	185		

16 Safety Directions 186 16.1 General 186 16.2 Intended Use 187 16.3 Limits of Use 189 16.4 Responsibilities 190 16.5 Hazards of Use 191 Laser Classification 16.6 197 16.6.1 Integrated Distancer, Measurements with Red Dot (only for Builder RM power) 198 16.6.2 Integrated Distancer, Measurements with Fine/Fast (only Builder M power and RM power) 202 16.6.3 Integrated Distancer, Visible Laser (only Builder R and RM)204 16.6.4 Laser Plummet 206 16.7 Electromagnetic Compatibility EMC 209 16.8FCC Statement, Applicable in U.S. 211 17 Technical Data 214 17.1Angle Measurement 214 Distance Measurement 17.2 215 17.3 General Technical Data of the Instrument 220 18 International Limited Warranty, Software License Agreement 226 Index 228

Builder

12

1	How to Use this Manual			
()	It is recommended to set-up	It is recommended to set-up the instrument while reading through this manual.		
Index	The index is at the back of the manual.			
(P	Keys, fields and options on the screens which are considered as self-explanatory are not explained.			
Validity of this manual	This manual applies to all Builder instruments. Differences between the various models are marked and described.			
Available docu-	Name of documentation	Description		
mentation	Builder User Manual	All instructions required in order to operate the instrument to a basic level are contained in this User Manual. Provides an overview of the instrument together with technical data and safety directions.		

Name of documentation	Description
Builder Construction made faster	Describes the basic principle of construction measure- ment in combination with Builder functionality.
Builder Quickguide	Describes the onboard application programs step-by- step. Intended as a quick reference field guide.

Format of the documentation

The Builder CD contains the entire documentation in electronic format. It is also available in printed form.

2

Builder

Technical Terms and Abbreviations



	Term	Description
a)	Line of sight / collimation axis	Telescope axis = line from the reticle to the centre of the objective.
b)	Standing axis	Vertical rotation axis of the instrument.
c)	Tilting axis	Horizontal rotation axis of the telescope.
d)	Vertical angle / zenith angle	
e)	Vertical circle	With coded circular division for reading the vertical angle.
f)	Horizontal angle	
g)	Horizontal circle	With coded circular division for reading the horizontal angle.

Plumb line / Compensator



Direction of gravity. The compensator defines the plumb line within the instrument

Builder

Standing axis inclination



Angle between plumb line and standing axis. Standing axis tilt is not an instrument error and is not eliminated by measuring in both faces. Any possible influence it may have on the horizontal direction resp. vertical angle is eliminated by the dual axis compensator.





Abbreviation	Description
	Indicated meteorological corrected slope distance between instru- ment tilting axis and centre of prism/laser dot.
	Indicated meteorological corrected horizontal distance.
	Height difference between station and target point.
hr	Reflector height above ground
hi	Instrument height above ground
E ₀	Easting of Station
N ₀	Northing of Station
H ₀	Height of Station
E	Easting of target point
N	Northing of target point
Н	Height of target point

3 Description of the System

3.1 Instrument Models

Instrument models

(B

Model	Description
Builder T	Electronic theodolite.
Builder R	Electronic theodolite with distance measurement capability and construction software.
Builder RM	Same as Builder R, additionally with RS232 interface and internal memory to store and manage data and an extended application menu.
Builder RM power*	Same as Builder RM, additionally with 10-digits keypad, distance measurement with reflectors (fine/fast mode), LED that shows used EDM mode and an extended application menu.
Builder M power*	Same as Builder RM power but only distance measurements with reflectors (fine/fast mode).

Builder T, R and RM are available as Builder 100 and 200. Builder RM power is available as Builder 100, 200 and 300. Builder M power is available as Builder 100 and 200.

*) The term "power" can be abbreviated as "p", for example Builder R300Mp.







ŝ

Builder

- a) GEV189 USB Data transfer cable (for Builder RM)
- b) Builder instrument with keyboard
- c) CTB101 Tribrach w/o optical plummet, black
- d) One Allen key, one Adjusting pin
- e) Alkaline batteries, 3x Twinpack, Size AA
- f) GEB111 Battery
- g) GAD39 battery adapter for Alkaline batteries, Size AA
- h) Tip for GLS115
- i) CPR105 Double-sided flat prism
- j) GLS115 Mini reflector pole set
- k) Protective cover / Lens hood
- I) GLI115 Clip-on bubble for GLS115
- m) CPR111 BUILDER Prism, True-Zero Offset
- n) User Manual, CD Rom, Booklet "Construction made faster"

The content depends on the chosen Builder model.

3.3 Instrument Components



- a) Detachable carrying handle with mounting screws
- b) Alignment sight
- c) Telescope (with integrated Distance Meter for R, RM, M power and RM power)
- d) Vertical drive
- e) Battery holder for GAD39/GEB111/GEB121
- f) Circular level
- g) Tribrach
- h) Serial interface RS232 (for Builder RM, M power and RM power)



3.4 Power Supply

Instrument Power for the instrument can be supplied either internally or externally.

• Six single cells, Size AA in the battery adapter GAD39,

or one GEB111 battery,

• or one GEB121 battery fitted into the battery compartment.

External battery

Internal batterv

- One GEB171 battery,
- or one GEB70 battery connected via cable.





đ

Use the Leica Geosystems batteries, chargers and accessories or accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

Builder

3.5 Software Concept

Description All instrument types use the same software concept. The software has different modes depending on the instrument type.

Software Concept

Model	Screen Available Modes
Builder T	CONFIG THEO 04:07 Hz C : 48.0000 g V t : 60.0000 g Hz HOLD Hz = 0 LEVEL
Builder R	CONFIG THEO IPROG • Configuration Mode 04:07 • Theodolite Mode Hz • 48.0000 g • V t 60.0000 g • Hz Hz • 100000 g • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • • •

Model	Screen	Available Modes
Builder RM, M power and RM power	CONFIG THEO PROG DATA D4:07 D4:07 D4:07 D4:07 D4:07 Hz 48.0000 g □ V ↑: 60.0000 g □ Hz Hz EVEL	 Configuration Mode Theodolite Mode Programs Mode Data Management Mode

User Interface

4 User Interface

4.1 Keyboard

Keyboard Builder T, R and RM



Keyboard Builder M power and RM power



Keys

All Builder models:

Кеу	Description
	Changes tab in the tab bar.
$\mathbf{\hat{\mathbf{b}}}$	Move the focus on the screenStart the edit mode for edit fieldsControl the input bar in edit and input mode

User Interface

Builder

2	n
2	υ

Key	Description
ESC	 Leaves the current menu or dialog without storing changes made. If THEO mode is active: press approx. 5 seconds to access System Info.
	 If the instrument is off: to turn instrument on If the instrument is on: press at any time to turn on and off the display light incl. reticle illumination and press approx. 5 seconds to turn off the instrument
	Correspond to the three softkeys that appear on the bottom of the screen when the screen is activated.

Only Builder M power and RM power:

Key/LED	Description
*	 Press button short: to access the EDM settings Press button long: to toggle between red dot and fine/fast (Builder RM power), or between fine and fast (M power)
ABC DEF GHI 7 8 9 JKL MNO PER 4 5 6 STU VMX YZ_ 1 2 3 ZSX -68 27 0 - ±	Alphanumeric keys
	 LED white: EDM type is fine/fast LED red : EDM type is red dot (only Builder RM power) LED flashes once if the EDM setting has changed by toggling or when a measurement is taken LED blinks if EDM measures in tracking-mode

User Interface	Builder	32
4.2	Screen	
()	All shown screens are examples. It is possible that local software versions are different to the basic version.	
Screen	CONFIG THEO PROG DATA) — a (04:07 — b	
	Hz <: 48.0000 g □ _ c	
	V ↑: 60.0000 g ⊡ b) Time	
	Hz HOLD Hz = 0 LEVEL e e) Softkeys	

Description

Element	Description
Tab bar	The current active tab is shown black.
Time	Shows the current time provided that the setting is made in the configurations.
lcons	Shows the current status information of the instrument. Refer to "4.4 Icons".
Screen area	The working area of the screen.
Softkeys	Commands can be executed using the function keys. The commands assigned to the softkeys are screen dependent.

User Interface	Builder	34
4.3	Tab Bar	
Tab bar	In the tab bar the current active software mode is shown black.	
	CONFIG THEO PROG DATA <- Tab bar	

Hz ⊄: 48.0000 g 🗎

Ē

Tab	Mode
CONFIG	Configuration Mode
THEO	Theodolite Mode
PROG	Program Mode (for Builder R, RM, M power and RM power)
MODE	Data Management Mode (for Builder RM, M power and RM power)

04:07

The availability of the tabs depend on the instrument model.

4.4 Icons

Description The icons provide information related to basic instrument functions.

The status and source of the battery is displayed.

lcon	Description		
	Battery The batter capacity,	attery capacity ne battery symbol indicates the level of the remaining battery apacity, 75% full shown in the example.	
	(B) (B)	The battery symbol is only shown if <battery nimh="" type:=""></battery> is set in Configuration Mode. If <battery nimh="" type:=""></battery> is set but alcaline batteries used	
	74	then the battery charge is not displayed correctly.	

Compensator

Battery

Compensator on or off is displayed.

lcon	Description
	Compensator is turned on.
	Compensator is turned off.

User Interface	Builder				
4.5	Symbols				
Horizontal angle	The direction of the horizontal angle is displayed.				
	Symbol	Description			
	Ċ	Indicates that horizontal angle is set to right side angle meas- urement (clockwise).			
	5	Indicates that horizontal angle is set to left side angle measure- ment (anticlockwise).			
Vertical angle	The "0"-Orientation of the vertical angle is displayed.				
	Symbol	Description			
	1	Indicates that the "0"-orientation of the vertical angle is selected to the zenith.			
	→	Indicates that the "0"-orientation of the vertical angle is selected to the horizon.			
	%	Indicates that the vertical angle is shown in percentage.			
Distance

Symbol	Description
	This symbol indicates the horizontal distance .
	This symbol indicates the height difference .
	This symbol indicates the slope distance .

Triangles

Symbol	Description
<►	Double triangles on the right indicate a choice field .
	A single triangle on the right indicates a choice list .

Operation	Builder 38			
5	Operation			
5.1	Selection of Language			
Description	After switching on the instrument the user is able to choose his preferred language.			
(Jan State S	The dialog to choose the language is only shown if two languages are loaded onto the instrument and <lang.dialog: on=""></lang.dialog:> is set in Configuration mode or on System Info dialog.			
Loading/Changing				
languages	Instrument model	To load an additional language		
		or to change the existing language(s),		
	Builder RM, M power and RM power	connect the instrument to LGO Tools Version 4.0 (M power and RM power to LGO Tools Version 6.0) or higher via the serial interface and load using "LGO Tools - Software Upload".		
	Builder R	contact your Leica Geosystems authorized service workshop.		
	Builder T	contact your Leica Geosystems authorized service workshop.		
	-	•		

5.2 Instrument Setup

Description This topic describes an instrument setup over a marked ground point using the laser plummet. It is always possible to set up the instrument without the need for a marked ground point.



Important features:

- It is always recommended to shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.
- The laser plummet described in this topic is built into the vertical axis of the instrument. It projects a red spot onto the ground, making it appreciably easier to centre the instrument.
- The laser plummet cannot be used in conjunction with a tribrach equipped with an optical plummet.



Step	Description
1.	Extend the tripod legs to allow for a comfortable working posture. Position the tripod over the marked ground point, centring it as well as possible.
2.	Fasten the tribrach and instrument onto the tripod.
3.	Turn on the instrument by pressing the 🐠 key.
	The electronic level and laser plummet are activated automatically after switching on the instrument, if compensator is set to on.

Step	Description
4.	Move the tripod legs (1) and use the tribrach footscrews (6) to centre the plummet (4) over the ground point.
5.	Adjust the tripod legs to level the circular level (7).
6.	By using the electronic level turn the tribrach footscrews (6) to precisely level the instrument. Image: Construct the electronic level step-by-step Image: Construct the electronic level step-by-step
7.	Centre the instrument precisely over the ground point (4) by shifting the tribrach on the tripod plate (2).
8.	Repeat steps 6. and 7. until the required accuracy is achieved.

Levelling up with the electronic level step-by-step

The electronic level can be used to precisely level up the instrument using the footscrews of the tribrach.

Step	Key/Screen	Description
1.		Turn on the instrument by pressing the () key.
(ta)		The electronic level and laser plummet are activated automatically after switching on the instrument, if compensator is set to on.
2.		Centre the circular level approximately by turning the footscrews of the tribrach.
(a)		The bubble of the electronic level and the arrows for the rotating direction of the footscrews only appear if the instrument tilt is inside a certain levelling range.
3.		Turn the instrument until it is parallel to two footscrews.

Step	Key/Screen	Description	
4.		Centre the electronic level of this axis by turning the two footscrews. Arrows show the direction for rotating the footscrews. When the electronic level is centred the arrows are replaced by checkmarks.	
5.		Centre the electronic level for the second axis by turning the last footscrew. An arrow shows the direction for rotating the footscrew. When the electronic level is centred the arrow is replaced by a check- mark.	
(h)		When the electronic level is centred and three checkmarks are shown, the instru- ment has been perfectly leveled up.	
6.		Accept with OK .	

Operation		Builder			44
hanging the ntensity of the	External intensity	influences and the y of the laser.	surface condition	ons may	require the adjustment of the
aser plummet	Step	Key/Screen			Description
	1.				Turn on the instrument by pressing the () key.
	ل م ا				The electronic level and laser plummet are activated automat- ically after switching on the instrument, if compensator is set to on.
	2.	$ \begin{array}{c} & & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ $	50%	Max	Adjust the intensity of the laser plummet by pressing The laser can be adjusted in 25% steps as required.

Positioning over pipes or holes



Under some circumstances the laser dot is not visible, for example over pipes. In this case, the laser dot can be made visible by using a transparent plate so that the laser dot can be easily aligned to the center of the pipe.

Operation

Centring with the optional shifting tribrach step-bystep



If the instrument is equipped with the optional shifting tribrach it can be aligned to the ground point by slight shifting.

Step	Description
1.	Loosen screw.
2.	Shift instrument.
3.	Fix instrument by turning screw.

5.3 Instrument Battery

Change instrument battery step-bystep



Step	Description
1.	Face the instrument so that the vertical drive screw is on the left. The battery compartment is now on the left side of the instrument. Turn the knob to the vertical position, opening the lid of the battery compartment.
2.	Pull out the battery housing.
3.	Pull the battery or the GAD39 battery adapter from the battery housing.



Step	Description
4.	The polarity of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
5.	Place the battery/adapter into the battery housing, ensuring that the contacts are facing outward. Click the battery/adapter into position.
6.	Place the battery housing into the battery compartment. Push the battery housing in until it fits completely into the battery compartment.
7.	Turn the knob to lock the battery compartment. Ensure that the knob is returned to its original horizontal position.



For NiMH batteries:

Charging / first-time use

- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
- For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make 3 5 charge/discharge cycles.
- The permissible temperature range for charging is between 0°C to +35°C/+32°F to +95°F. For optimal charging we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery if the temperature is too high.

Operation/Discharging

- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
- Low operating temperatures reduce the capacity that can be drawn; very high operating temperatures reduce the service life of the battery.

Operation	Builder	50	
5.4	Distance Measurement		
5.4.1	General		
Description	A laser distancer (EDM) is incorporated into the instruments (Builder R, RM and RM power) of the Builder series. In all these versions, the distance ca mined by using a visible red laser beam which emerges coaxially from the objective.	Л, M power n be deter- e telescope	
	 There are multiple EDM types: Measurements with red dot (any surface or CPR105 flat-prism) Measurements with fine or fast (CPR111 BUILDER prism, true-zero or 	ffset)	
() J	Available EDM types depend on the model.		
	In the standard version of the Builder M power and RM power, the maximu measurement range is 1000 m. Please refer to "12.1 EDM" on how to up measurement range.	m distance grade the	

Measurement with Red Dot

Description

5.4.2



- When measurements are being made using the red laser EDM, the results may be influenced by objects passing between the EDM and the intended target surface. This occurs because red dot measurements are made to the first surface returning sufficient energy to allow the measurement to take place. For example, if the intended target surface is the surface of a road, but a vehicle passes between the EDM and the target surface as MEASURE or M&R is pressed, the measurement may be made to the side of the vehicle. The result is the distance to the vehicle, not to the road surface.
- When a distance measurement is triggered, the EDM measures to the object which is in the beam path at that moment. If a temporary obstruction, for

Operation	Builder 52
	 example a passing vehicle, heavy rain, fog or snow is between the instrument and the point to be measured, the EDM may measure to the obstruction. Be sure that the laser beam is not reflected by anything close to the line of sight, for example highly reflective objects.
	• When measuring longer distances, any divergence of the red laser beam from the line of sight might lead to less accurate measurements. This is because the laser beam might not be reflected from the point at which the crosshairs are pointing. Therefore, it is recommended that the visible laser beam is aligned with the center of the target. Refer to "14 Check & Adjust" for more information on how to check the alignment.
	Do not measure with two instruments to the same target simultaneously.
	Guidelines for correct results:Do not measure to glass prisms as this may lead to incorrect distance values.

5.4.3 Measurement with Fine or Fast

Description

- Accurate measurements to prisms should be made with the standard program (EDM type: fine/fast)
- Measurements to strongly reflecting targets such as to traffic lights in reflector EDM mode without prism should be avoided. The measured distances may be wrong or inaccurate.
- Very short distances may be measured reflectorless in EDM type fine/fast to well reflecting targets.

Operation	Builder		
5.5	CPR105 Flat Prism		
Descprition	ion The standard supplied Flat Prism (delivered with Builder R, RM) has two different reflective surfaces. The highly reflective cat-eye surface can be used for mean ments up to 250 m. The reflective tape has printed crosshairs for precise ain close range. The closer the flat prism is mounted to the ground, the more active tape be positioned over the measured point. For more precise positioning at prism positions, the GLS111 reflector pole with GAD105 adapter is recomme		R, RM) has two different can be used for measure- shairs for precise aiming at ground, the more accurate orecise positioning at higher adapter is recommended.
Prism mounting	GLI115 GLS115 CPR105	0.40 m	CPR105 GAD105 E 97 - E 97 - GLS111

5.6 CPR111 BUILDER Prism, True-Zero Offset

DescriptionThis prism with true-zero offset is only delivered with the Builder M power and
RM power. The closer the prism is mounted to the ground, the more accurate it can
be positioned over the measured point. For more precise positioning at higher prism
positions, the GLS111 reflector pole with GAD105 adapter is recommended.

To guarantee the accuracy the prism must be aligned well. If it is not or the line of sight is very steep it is recommended to aim the middle of the yellow arrows on the prism frame.

Prism mounting

ເສັ



Configuration Mode	Builder	56
6	Configuration Mode	
6.1 Overview		
Description	 The CONFIG mode is used for: creating user specific settings in order to adapt the instrument to your own requirements setting date and time setting units 	
(B)	Descriptions apply in general to Builder R, RM, M power and RM power. Available options depend on the model.	5

6.2 Accessing

Access step-bystep

Step	Description
1.	Turn on the instrument by pressing the 🐠 key.
2.	Level up the instrument. Refer to "5.2 Instrument Setup" for more infor- mation.
3.	Press 🕒 until CONFIG mode is active.

Example of a configuration screen



Description of fields for main configuration screen

Field	Option	Description
<laser< td=""><td>Off</td><td>Turns off the visible laser beam.</td></laser<>	Off	Turns off the visible laser beam.
Pointer:>	On	Turns on the visible laser beam.
Builder R, RM and RM power)	Off&Trk	Turns on continuous distance measure mode.
	On&Trk	Turns on continuous distance measure mode and visible laser beam.
<tracking:></tracking:>	Off	Turns off continuous distance measure mode.
(only Builder M power)	On	Turns on continuous distance measure mode.
<hz incre-<br="">ment:></hz>	Right	Sets horizontal angle to clockwise direction measure- ment.
	Left	Sets horizontal angle to counter-clockwise direction measurement.

Field	Option	Description	
<v setting:=""></v>		Sets the vertical angle.	
	Zenith	Zenith=0°; Horizon=90°	270°
	Horizon	Zenith=90°; Horizon=0° Vertical angles are positive above the horizon and negative below it.	180° 180° 180° 180°

Configuration Mode		В	uilder 60
	Field	Option	Description
		V(%)	Vertical angles are expressed in % with positive above the horizon and negative below it. 100% corresponds to an vertical angle of 45° (50 gon, 800 mil). The % value increases rapidly. % appears on the display above 300%.
	<compen- sator:></compen- 	On	Turns on the compensator. Vertical angles are relative to the plumb line. The horizontal angle is corrected for the transversal tilt errors, if <hz correction:="" on="">. Refer to "14 Check & Adjust" for more information.</hz>

Field	Option	Description
	Off	Turns off the compensator. Vertical angles are relative to vertical/standing axis.
		If the instrument is used on an unstable base e.g.shaking platform, ship, etc. the compensator should be switched off. This avoids the compensator drifting out of its measuring range and interrupting the measuring process by indicating an error. The compensator setting remains active even after the instrument is switched off.
<beep:></beep:>	Off	Turns key beep and sector beep off.
	Key	Turns only key beep on.
	Key&Sect	Turns key beep and sector beep on. Turns layout beep in Layout application on.
	Sector	Turns sector beep on. Turns layout beep in Layout application on.

Field	Option	Description
		 The key beep is an acoustic signal after each keystroke. The sector beep is an acoustic signal which sounds if horizontal angle is 0°, 90°, 180°, 270° or 0, 100, 200, 300 gon. The sector beep is useful for staking out right angles.
		Example for sector beep:

Field	Option	Description
		 No beep Fast beep, interrupted; from 95.0 to 99.5 gon and 105.0 to 100.5 gon Permanent beep; from 99.5 to 99.995 gon and from 100.5 to 100.005 gon
<battery Type:></battery 	Alcaline NiMH	Battery symbol is not displayed in THEO mode. Battery symbol is displayed in THEO mode.
<auto off:=""></auto>		Sets the behaviour of power down and instrument.
	Enable	The instrument is turned off after 20 minutes without any action, for example no key pressed; Vertical and horizontal angle deviation is $\leq \pm 3$ '.
	Disable	The instrument is turned on permanently.
	Sleep	The instrument is off until any key is pressed.
<measure& Record:></measure& 		Assigns seperated or combined measurement func- tionality to middle softkey button in all measure screens.

Field	Option	Description
	MEAS/REC	Starts distance and angle measurements without saving measured values. After measurement displayed values can be saved with RECORD.
	ALL-in-1	Starts distance and angle measurements and saves measured values in one step.

Description of fields for display configuration screen

Field	Option	Description
<contrast:></contrast:>	From 10% to 100%	Adjusts the contrast level for the display immedi- ately.
<display Heater:></display 	On or Off	Turns the display heater immediately on and off. The display heater is automatically activated when the display illumination is on and the instrument temperature is $\leq 5^{\circ}$ C.
<angle Unit:></angle 		The units shown for all angular and coordinate related fields.

Field	Option	Description	
	01"	Degree sexagesimal: possible angle values: 0° to 359°59'59'' Degree decimal: possible angle values: 0° to 359.999°	
	Dec.deg		
	Gon	Gon: possible angle values: 0 gon to 399.999 gon	
	Mil	Mil: possible angle values: 0 to 6399.99mil	
		The setting of the angle units can be changed at any time. The actual displayed values are converted according to the selected unit.	
<minimum Reading:></minimum 		The number of decimal places shown for all angular fields. This is for data display and does not apply to data export or storage.	
	Precise (only 200M power, R200M power, R300M power)	0° 00' 01" for <angle '="" ''="" unit:="" °="">. 0.0001 for <angle gon="" unit:=""> and <angle unit:<br="">Dec.deg>. 0.01 for <angle mil="" unit:="">.</angle></angle></angle></angle>	

Configuration Mode

Builder

Field	Option	Description
	Precise or Standard (only 200M power, R200M power, R300M power)	0° 00' 01" for <angle '="" ''="" unit:="" °="">. 0.001 for <angle gon="" unit:=""> and <angle unit:<br="">Dec.deg>. 0.01 for <angle mil="" unit:="">.</angle></angle></angle></angle>
	Standard or Simple (only 200M power, R200M power, R300M power)	0° 00' 05" for <angle '="" ''="" unit:="" °="">. 0.005 for <angle gon="" unit:=""> and <angle unit:<br="">Dec.deg> 0.05 for <angle mil="" unit:="">.</angle></angle></angle></angle>
	Simple	0° 00' 10" for <angle '="" ''="" unit:="" °="">. 0.010 for <angle gon="" unit:=""> and <angle unit:<br="">Dec.deg>. 0.10 for <angle mil="" unit:="">.</angle></angle></angle></angle>
<distance Unit:></distance 		The units shown for all distance and coordinate related fields.
	Meter	Metres [m]
	ft-in1/16 Us-ft	US feet, inches and 1/16 inches (0' 00 0/16 fi) [ft] US feet [ft]

Field	Option	Description
	INT-ft	International feet [fi]
<language:></language:>		The current loaded language(s) are shown.
<lang. Dialog:></lang. 		If two languages are loaded onto the instrument a dialog to choose the language can be shown directly after switching on the instrument.
	On	The language dialog is shown as startup dialog.
	Off	The language dialog is not shown as startup dialog.

Description of fields for time configuration screen

Field	Option	Description
<time Format:></time 	24 hours or 12 hours (am/pm)	Shown time format in all time related fields.
<date Format:></date 	dd.mm.yyyy,mm.dd.yyyy, or yyyy.mm.dd	Shown date format in all date related fields.

Configuration Mode

Builder

6.3 How to Make a Setting

How to make a setting with a choicelist step-bystep

Step	Description
	Make sure that CONFIG Mode is active.
1.	Press $\hat{igodold O}$ to set focus on desired field.
2.	Press \bigcirc to access the choicelist.
3.	Press $\hat{igodold p}$ to toggle through the list and set focus on desired field.
4.	Accept with OK .

How to make a setting with a choicefield stepby-step

Step	Description
	Make sure that CONFIG Mode is active.
1.	Press $\hat{igodold O}$ to set focus on desired field.
2.	Press $igodoldsymbol{ imes}$ to toggle through the settings and select desired field.
3.	Accept with OK .

7.1 Overview

Description

7

The **THEO** mode is used for:

- levelling up the instrument with the electronic level and adjusting the intensity of the laser plummet
- reading off the current horizontal and vertical angle
- setting horizontal angle to zero
- setting any horizontal angle
- quick setting of horizontal and vertical angle direction

7.2 Accessing

Access step-bystep

Step	Description
1.	Turn on the instrument by pressing the 🐠 key.
2.	Level up the instrument. Refer to "5.2 Instrument Setup" for more infor- mation.
3.	Press 📼 until THEO mode is active.

Example of a theodolite screen



Description of fields

Field	Description	
Hz 🔿	The current horizontal angle in "clockwise direction measurement".	
Hz 5	The current horizontal angle in "anticlockwise direction measure- ment".	
	Thanks to dual axis compensation, Builder is able to adjust the horizontal angle reading accordingly. Therefore, turning the telescope vertically might cause the horizontal angle to change. The change in <h2:> is the compensation of the standing axis tilt. The more precise the instrument is leveled, the less the horizontal angle needs to be compensated.</h2:>	
v 🕇	The current vertical angle with Zenith=0° and Horizon=90°.	
v→	The current vertical angle with Zenith=90 $^{\circ}$ and Horizon=0 $^{\circ}$.	
V %	The current vertical angle in percentage.	
How to Set Horizontal Angle to 0.000

Set horizontal angle to 0.000 step-by-step

7.3

Step	Description		
	Make sure that THEO Mode is active.		
1.	Turn telescope and aim at desired target point.		
2.	Press Hz = 0 .		
3.	Accept with OK .		
	The horizontal angle is set to 0.000.		

i neodolite <i>i</i> viode	Theod	olite	Mode
----------------------------	-------	-------	------

7.4

How to Set Any Horizontal Angle

Set any horizontal angle step-by-step

Step	Description
	Make sure that THEO Mode is active.
1.	Turn telescope to desired horizontal angle.
2.	Press Hz hold .
3.	Turn telescope and aim at a target point.
4.	Accept with OK .
(and	The indicated horizontal angle is set.

7.5 Quick Setting of Horizontal Angle and Vertical Angle Direction Measurement

Quick setting of horizontal angle direction measurement step-by-step

Step	Description		
	Make sure that THEO Mode is active.		
	Press —> to set horizontal angle to "clockwise direction measure- ment" or press — to set horizontal angle to "counter-clockwise direction measurement".		
(B)	The horizontal angle is set to clockwise direction or counter-clockwise direction measurement.		

Quick setting of vertical angle direction measurement step-by-step

Step	Description
(B)	Make sure that THEO Mode is active.
	Press $\hat{\bigcirc}$ to set vertical angle to the zenith, the horizon or in percentage.
(B)	The vertical angle is set.

8 Program Mode, for Builder R, RM, M power and RM power 8.1 Overview

Description

(B

- The **PROG** mode is used for:
- distance measurements
- Station Setup
- working with application programs

Descriptions apply to Builder R, RM, M power and RM power. Available options depend on the model.

8.2 Accessing

Access step-bystep

Step	Description
1.	Turn on the instrument by pressing the 🐠 key.
2.	Level up the instrument. Refer to "5.2 Instrument Setup" for more infor- mation.
3.	Press 🕒 until PROG mode is active.

Example of an application program screen



Program Mode, for M power and RM po	Builder R ower	, RM, Builder 80	
8.3	Pointsearch		
Description	Pointsearch is a global function used by applications and setups, for example to find internally saved measured or fixed points.		
(F	Descriptions apply to Builder RM, M power and RM power. Available options depend on the model.		
Pointsearch step-	Step	Description	
by-step	1.	Turn on the instrument by pressing the 🐠 key.	
	()	Make sure that PROG mode is active.	
	2.	Choose an application, for example Layout.	
	3.	Press APPL to go back to application menu. (Only in application Layout)	
	4.	Press P-List .	
	5.	Enter in <search id:=""></search> the point identifier for that should be searched.	
	6.	Press OK .	
	7.	Press ᅌ to select the point.	
	8.	Press SELECT.	

Step	Description
	Now the point appears in the application that was active before.



Description of fields

Field	Description		
<search id:=""></search>	Enter the point to be searched for.		
231	The middle data point matches the entered information best.		

8.4 Measure and Record

Possibilities

Two possibilities to measure and record points are offered:

- Measure and record in one step (ALL-in-1)
- Combining MEASURE and RECORD

Measure and record (ALL-in-1) step-by-step

Step	Description
(B)	Make sure that PROG Mode is active.
	Make sure that <measure&record: all-in-1=""></measure&record:> is set. Refer to "6 Configuration Mode" for information on how to make the setting.
1.	Position the prism at the point to be measured.
2.	Press M&R to measure and record the distance and angles to the point.

Combining MEASURE and RECORD step-bystep

The key combination of **MEASURE** and **RECORD** can be used to measure non accessible points with the prism, for example building corners.



Step	Description
	Make sure that PROG Mode is active.
en)	Make sure that (Measure&Record: MEAS/REC) is set. Refer to "6 Configuration Mode" for information on how to make the setting.
1.	Position the prism at the same distance from the instrument as the building corner to be measured.
2.	Press MEASURE to measure the distance.
3.	Press RECORD to store the measured distance to the prism and the angles to the corner of the house.

9	Station Setup, for Builder R, RM, M power and RM power			
9.1	Overview			
Description	 The Setup programs can be used to set up and orientate the instrument. Three Setup options with different Setup methods are available: Control line Coordinates Height 			
Description of	Setup Option	Setup Method	Description	
options	Control line	Over 1st point	To set up the instrument on the startpoint of a control line.	
		Anywhere	To set up the instrument along a control line.	
	Coordinates	Over Known Point	To set up the instrument over a known point and orientate to a known azimuth or to up to five backsight points.	

Setup Option	Setup Method	Description
	Anywhere	To set up the instrument on an unknown point and orientate by measuring angles and distances to up to five known target points.
Height	Height Transfer	To determine the height of the position of the instrument from measurements to up to five target points with known height.

For the different Setup methods, different types of data and a different number of control points have to be available.

Descriptions apply in general to Builder R, RM, M power and RM power. Available options depend on the model.

ີສັ

Station Setup, fo M power and RM	pr Builder R, RM, power Builder	86
9.2	Setup Option 1: Establish Control Line	
9.2.1	General	
Description	The Setup Option Control Line is used to set up the instrument in relation t control line. All further measuring points and points to be staked are in relat the control line.	o a ion to

9.2.2 Establish Control Line - Over 1st Point

Description

The Setup method **Control Line - Over** 1^{st} **Point** is used to set the station coordinates to E₀= 0.000, N₀=0.000, H₀=0.000 and the orientation to 0.000.

Diagram



Station Setup, fo M power and RM	or Builder R, RM, I power Build	ler	88
9.2.3	Establish Control Line	e - Anywhere	
Description	The Setup method Establish C ment along a control line. The or N_0 =0.000 and H_0 =0.000. The or second line point. Furthermore uring line and offset values.	ontrol Line - Any coordinates of line prientation is set to line startpoint can	where is used to set up the instru- e start point are set to E_0 = 0.000, o 0.000 in the direction of the n be shifted by entering or meas-
(B)	The height of line startpoint P1 urements.	is used as the ref	ference height for all further meas-
Diagram	Hz = 0.000 P2 P1	P0 P1 P2	Station Line start point Second line point

Shifting Line Startpoint In Setup method Establish Control line - Anywhere line startpoint can be shifted to use another origin for the local coordinate system. If the entered line value is positive the start point moves forward otherwise backward. The start point gets a rightward shift if the entered offset value is positive otherwise a leftward shift.

Diagram



P1 Line start point

P3

а

Ь

- P2 Second line point
 - Shifted line start point, new
 - origin of local coordinate system
 - Offset value for shift
 - Line value for shift



9.3	Setup Option 2: Establish Coordinates
9.3.1	General
Description	The Setup Option Coordinates is used to set up the instrument in relation to a local or global coordinate system. All further measuring points and points to be staked are in relation to the coordinate system.

9.3.2 Establish Coordinates - Over Known Point

Description The Setup method **Establish Coordinates - Over Known Point** is used to set up the instrument on a known point and orient to a known azimuth or to up to five known backsight points. If more than one backsight point was used, the quality of the orientation is shown in the result screen.







9.3.3 Establish Coordinates - Anywhere

Description The Setup method **Establish Coordinates - Anywhere** is used to set up the instrument on an unknown point and set the orientation by measuring angles and distances to a minimum of two known target points and a maximum of five target points. Beside the computation of the position, the height is also computed if the measured target point has a known height. If more than two known target points were used, the quality of the new station is shown in the result screen.

Diagram



Example of a result screen	CONFIG)THEO Pos.Std.Dev.)PROG :)DATA) 0.008 m		
	Pos control po Pt0004 Pt0003 Pt0002 RED0	int accu : : : OK	0.004 m 0.004 m 0.018 m 0.012 m HGT	REDO OK HGT	To delete or re-measure an used target point. To accept computed/measured values. To switch to height result screen.

Station Setup, for Bu M power and RM pov	uilder R, I ver	RM, Builder 96	
9.4	Setup Option 3: Establish Height		
9.4.1	General		
Description	The Setup Option Establish Height is used to enter the station height, instrument height and reflector height. All further measuring points and points to be staked are in relation to the entered values.		
Enter station	Step	Description	
height and		Make sure that PROG Mode is active.	
reflector height	1.	Press SETUP.	
step-by-step	2.	Press 🔶 to highlight Setup option Height .	
	3.	If a value for station height is shown, the value is related to the chosen setup method of Control Line or Coordinates . This value may be changed or in case of <> , a height can be entered.	
	4.	Enter station height, instrument height and reflector height.	
	5.	Accept with OK .	

9.4.2 Height Transfer

Description

The Setup method **Height Transfer** is used to determine the height of the position of the instrument from measurements to up to five target points with known height.



10 Application Programs, for Builder R, RM, M power and RM power

Overview

Description

10.1

Application programs are predefined programs, that cover a wide spectrum of construction tasks and facilitate daily work in the field. Up to nine different application programs are available.

Description of application programs

Application program	Description
Layout	To stake out points.
As Built	To measure points with line, offset and height difference or with easting, northing and height.
Angle & Distance	To measure points with horizontal angle, horizontal distance and height difference.
Tie Distance	To determine horizontal distance, height difference and grade between two measured points.
Area (tilt) & Volume	To determine area and perimeter of a plane and tilted surface. Furthermore a volume with constant height can be calculated.

Application program	Description
Hidden Point	To measure points that are not directly visible. Two methods: using a rod with two targets, alternatively enter line of sight shift and/or side shift manually.
COGO	Performs coordinate geometry calculations such as inter- sections and more.
Layout Line/Arc/Spiral	Layout and as-built check of lines, arcs or spirals. Includes road element and grid layout.
Measure & Descriptor	To measure and encode points.

Descriptions apply to Builder RM, M power and RM power. Available options depend on the model.

ເສ

Application Prog M power and RA	rams, for Builder R, RM, I power Build	er	100
10.2	Layout		
Description	The application program Layout mined points. These predetermin be staked are defined by enterin depending on the used setup m can also be selected from the m difference between the measure	t is used to plac ned points are t ng line and offs ethod. For Buil nemory. The pro ed point and th	ce markers in the field at predeter- the points to be staked. The points to set or easting, northing and height der RM, M and RM power the points ogram calculates and displays the he point to be staked.
Diagram	d1 P2 d2 d3	P0 P1	Station Current position

- Ρ1 Current position
- Point to be staked P2
- d1 $\langle \uparrow :\rangle$ go forward or $\langle \downarrow :\rangle$ go back d2 $\langle \rightarrow :\rangle$ go right or $\langle \leftarrow :\rangle$ left
- d3 <f:> fill or < L:> cut



CONFIG)	THEO PR	20G	DATA	_)	APPL
Layout			8		
Pt:		.	×		MEASU
	P+0011				
Line:	-4.700 m	۱ 🕇	0.254	m	
Offs:	25.000 m	1 +	0.345	m	
н :	0.500 m	1 T	0.362	m	CETUD
APPL	MEASU	RE	SETU	P	SETUP

To start application programs menu. **RE** To measure and display stake out differences. To turn on/off Tracking mode by pressing approx. 5 seconds. To start station setup

menu.

Description of fields

Field	Description
<pt:></pt:>	The identifier for the points to be staked. Available for Builder RM, M power and RM power.
<line:></line:>	Available if a Setup method with Control Line was used. Longitudinal offset of the start point of the control line in the direc- tion of the second point of the control line. Line is positive in the direction from line start point to second line point.
<offs:></offs:>	Available if a Setup method with Control Line was used. Cross offset to the control line. Offset is positive at the right hand side of the control line.
<e:></e:>	Available if a Setup method with Coordinates was used. Easting of point to be staked.
<n:></n:>	Available if a Setup method with Coordinates was used. Northing of point to be staked.
<h:></h:>	Height of point to be staked.

Elements of the graphical display

In application program **Layout** a graphical display provides a guide to find the point to be staked out.

Element	Description
\otimes	Reflector
х	Point to be staked
< †: >/< ↓ :>	go forward / back
< ~ :>/< → :>	go left / right
< †: >/< ↓ :>	fill / cut

Application Program M power and RM po	ns, for Builder R, RM, ower	Builder		104
10.3	As Built			
Description	The application progra points. The program s depending on the use	am As built is u shows line and c ed Setup methoo	ised for meas offset values d.	suring an unlimited number of or easting, northing and height
Example of an As Built application screen	Displayed graphic and CONFIG)THEO As Built Pt: Pt: PtOD Line: 2.834 Offs: 19.938 H : -0.263 APPL H8	available values	s depend on APPL • M&R UP SETU	the used Setup method. To start application programs menu. To measure and display distances and record data. To turn on/off Laserpointer by pressing approx. 5 seconds (except Builder M power). P To start station setup menu.

Description of fields

Field	Description
<pt:></pt:>	The identifier for the measured points. Available for Builder RM, M power and RM power.
<line:></line:>	Available if a Setup method with Control Line was used. Longitudinal offset of the start point of the control line in the direc- tion of the second point of the control line. Line is positive in the direction from line start point to second line point.
<offs:></offs:>	Available if a Setup method with Control Line was used. Cross offset to the control line. Offset is positive at the right hand side of the control line.
<e:></e:>	Available if a Setup method with Coordinates was used. Easting of measured point.
<n:></n:>	Available if a Setup method with Coordinates was used. Northing of measured point.
<h:></h:>	Height of measured point.



Elements of the graphical display

In application program **As Built** a graphical display shows the position of the station, used control points, the reflector and the last 50 measured points.

Element	Description	Element	Description
渃	Station	+	Measured point
Δ	Control point	ŵ	North
\otimes	Reflector		Control Line

10.4 Angle & Distance

(B

Description

The application program **Angle & Distance** is used for measuring an unlimited number of points. The program shows horizontal angle, horizontal distance and height.

Displayed graphic and available values depend on the used Setup method.

Example of an Angle & Distance application screen

CONFIG)TH	EO PROG	DATA)	
Angle & Di	stance		APPL
Pt:			
	P†0021	•	M&R
Hz: 250).0000 g	· č	
_ :	5.692 m	•	
н: -	-0.025 m		
APPL	M&R	SETUP	SETU

- To start application programs menu.
- To measure and display distances and record data. To turn on/off Laserpointer by pressing approx. 5 seconds (except Builder M power). **P** To start station setup menu.

Description of fields

Field	Description
<pt:></pt:>	The identifier for the measured points. Available for Builder RM, M power and RM power.
<hz:></hz:>	The current horizontal angle.
	The measured horizontal distance to the target point.
<h:></h:>	Height of measured point.

Elements of the

Refer to "10.3 As Built" for more information.

graphical display

108
10.5 Tie Distance

Description The application program **Tie Distance** is used to compute horizontal distance, height difference and grade between two target points. The target points have to be measured.

The user can choose between two different methods:

- Polygonal (P1-P2, P2-P3);
- Radial (P1-P2, P1-P3);





Field	Description	
<from:></from:>	The identifier for the first measured point. Available for Builder RM, M power and RM power.	
<to:></to:>	The identifier for the second measured point. Available for Builder RM, M power and RM power.	
$\Delta \blacksquare$	Calculated horizontal distance between the measured points.	
Δ \blacksquare	Calculated height difference between the measured points.	
<grade:></grade:>	Calculated grade [%] between the measured points.	
Δ 🚄	Calculated slope distance between the measured points.	

Application Prog	rams, for Builder R, RM,
M power and RN	1 power Builder 112
10.6	Area plane (tilt) & Volume
Description The applicat	The application program Area with methods 'plane' and 'tilt' is used to compute area
size of areas	size of areas with max. 50 boundary points connected by straights. Furthermore a
volume with	volume with constant height can be calculated.
The calculate	The calculated area is projected onto the horizontal plane or projected onto the tilted
reference pl	reference plane depending on the chosen method. The tilted reference plane is com-
puted and u	puted and updated automatically after each measurement. It is determined out of all
current bou	current boundary points by those three points that stretch the largest area.
Diagram	The boundary points have to be measured ordered, either in clockwise or anticlock- wise direction.



(P

The area is calculated and displayed once three points have been measured.

Example of an Area Result screen



Field	Description
<nopt:></nopt:>	Number of measured points.
<area:></area:>	Calculated area.
<peri:></peri:>	Calculated perimeter.

Application Programs, for Builder R, RM, M power and RM power	Builder		114
Diagram	רם / ר	P0	Station
		P1	Start Point
	P3	P2	Target Point
	a	P3	Target Point
h ^c ×	d d	P4	Target Point
		а	Constant height
	a	b	Perimeter (tilt) of the tilted area
P1 //			stretched by all current measured points
	f e	с	Area (tilt), always closed to the
	g		start point P1 projected, onto the
, F4			tilted reference plane
,		d	Volume (tilt) = c x a
		е	Perimeter (plane) of the plane area
Ŷ			stretched by all current measured points
W.V.		f	Area (plane), always closed to the
20			start point P1, projected onto the horizontal plane
		g	Volume (plane) = f x a

10.7 Hidden Point (optional)

Description The application program **Hidden Point** allows measurements to a point that is not directly visible. The point can be determined by a rod or by entering the shift in the line of sight and the side shift.

The user can choose between two different methods:

- Rod 💣
- Shift 🕎 🕁

The application program Hidden Point is only available for the Builder RM, M power and RM power. The program can be started in total 40 times for trial. Afterwards you have to enter the license code.

3





Field	Description
<rl=rod length:=""></rl=rod>	Length of used rod.
<line of="" sight:=""></line>	Longitudinal offset from reflector in direction to the instru- ment.
<side shift:=""></side>	Cross offset of hidden point to the line instrument-reflector.
<e:></e:>	Easting of hidden point.
<n:></n:>	Northing of hidden point.
<h:></h:>	Height of hidden point.

Application Programs, for Builder R, RM, M power and RM power		Builder		118
Elements of the	In application program Hi	dden Point a grap	phical display shows the posit	ion of the
graphical display	station, the reflector and	the hidden point		

Element	Description
渃	Station
<u>≭</u>	Line instrument-reflector
\otimes	Reflector/first measured target of the rod
+	Hidden point
ŵ	North
	Control Line

10.8 COGO (optional)

Description

.S

The application program **COGO** is an application program to perform **co**ordinate **g**eometry calculations such as:

- Coordinates of points
- Directions between points
- Distances between points

The COGO calculation methods are:

- Intersections
- Line Extension
- Offset Line&Plane
- Traverse and Inverse

The application program COGO is only available for the Builder RM, M power and RM power. The program can be started in total 40 times for trial. Afterwards you have to enter the license code.

Diagram Intersec- Two Distances tions



Direction&Distance



Known

- P1 First known point
- P2 Second known point
- r1 Radius, as defined by the distance from P1 to P3 or P4
- r2 Radius, as defined by the distance from P2 to P3 or P4

Unknown

- P3 First COGO point
- P4 Second COGO point

Known

- P1 First known point
- P2 Second known point
- α Direction from P1 to P3 and P4
- r Radius, as defined by distance from P2 to P3 and P4

Unknown

- P3 First COGO point
- P4 Second COGO point

Two Lines



Two Directions



Known

- P1 First known point of line 1
- P2 Second known point of line 1
- P3 First known point of line 2
- P4 Second known point of line 2
- a Line 1
- b Line 2

Unknown

P5 COGO point

Known

- P1 First known point
- P2 Second known point
- α1 Direction from P1 to P3
- $\alpha 2$ Direction from P2 to P3

Unknown

P3 COGO point









Traverse



Known

- P1 Known point
- α Direction from P1 to P2
- d1 Horizontal distance between P1 and P2
- d2 Positive offset to the right
- d3 Negative offset to the left

Unknown

- P2 COGO point without offset
- P3 COGO point with positive offset
- P4 COGO point with negative offset



Description of fields

Refer also to the applications before.

Field	Description	
<direction:></direction:>	Direction between two points.	
<dist.:></dist.:>	Distance between two points.	
<line:></line:>	Longitudinal offset from the start point of the baseline.	
<offset:></offset:>	Cross offset to the baseline.	
Δ	Calculated horizontal distance between two points.	
Δ	Calculated height difference between two points.	
<new point:=""></new>	The identifier for the new COGO points.	
<e:></e:>	Easting of new COGO point.	
<n:></n:>	Northing of new COGO point.	
<h:></h:>	Height of new COGO point.	

Elements of the graphical display

In application program COGO a graphical display shows the position of the station, used known points, directions, distances and the new calculated point.

Element	Description
渃	Station
	Direction between two points
	Distance between two points
	Distance and direction between two points
Δ	Known point
+	New calculated COGO point

Refer to "10.2 Layout" for more information.

10.9 Layout Line/Arc/Spiral (optional)

Description The application program **Layout Line/Arc/Spiral** facilitates the easy stake out or checking of lines, grids, arcs, segments and spirals. Besides the usual layout of these elements, this application allows the user to stake out and check points relative to a road alignment.

The application program Layout Line/Arc/Spiral is only available for the Builder RM, M power and RM power. The program can be started in total 40 times for trial. Afterwards you have to enter the license code.

Diagram Line

Ì



- SP Start point
- EP End point
- RP1 Reference line start point
- RP2 Reference line end point
- SF Shift forward
- SR Shift right
- R Rotate
- d1 Line
- d2 Offset
- P Point to stake or check





- SP Start point of arc
- EP End point of arc
- CP Center point of circle
- R Radius of arc
- D Direction
- d1 Line
- d2 Offset
- P Point to stake or check
- CW Arc-turn clockwise
- ACW Arc-turn anticlockwise

Application Programs, for Builder R, RM, M power and RM power





Line/Arc/Spiral result screen



To start application programs menu. To measure and display distances and record data. To turn on /off Laser pointer by pressing approx. 5 seconds (except Builder M power).

Field	Description
<chai:></chai:>	Chainage.
<line:></line:>	Longitudinal offset of measured point from start point of reference line.
<arc:></arc:>	Longitudinal offset of measured point from start point of arc.
<spir:></spir:>	Longitudinal offset of measured point from start point of spiral.
<offs:></offs:>	Cross offset of measured point to reference element.
Δ	Calculated height difference between start point of the element and measured point.

Elements of the graphical display

In application program Layout Line/Arc/Spiral a graphical display shows the position of the station, reference element with its definitions, the reflector and the last 50 measured points.

Element	Description
兇	Station
4	Control point
\otimes	Reflector

Element	Description
+	Measured point
t	Turn of element

Refer to "10.2 Layout" for more information.

Application Progra	ams, for Builder R, RM,
M power and RM	power

C)

Builder

10.10 Measure & Descriptor

Description In the program **Measure & Descriptor** it is possible to give each measured point a descriptor. Further it shows slope and horizontal distances and height differences.

The application program Measure & Descriptor is only available for the Builder M power and RM power.

Example of Measure & Descriptor applica-	CONFIG)THE Measu Pt:	0 PROG DATA re & Descriptor P+0010	APPL M&R	 APPL To start application programs menu. M & R To measure and display distances and record data. To turn on /off Laser pointer by pressing approx. 5 seconds (except Builder M power). SETUP To start station setup measure
tion screen	Desc.: ⊴: ⊒: ⊿: APPL	TREE 5.056 5.055 -0.100 M & R SET	up setup	

Field	Description
<pt:></pt:>	The identifier for the measured points.

Field	Description
<desc.:></desc.:>	Entry of the description.
	The measured slope distance to the target point.
	The horizontal distance to the target point.
	The height difference to the target point.

(B

11	Data Management Mode, for Builder RM, M power and RM power		
11.1	Overview		
Description	 The DATA mode is used for: creating, viewing and deleting data in the field setting the communication parameters 		

Descriptions apply to Builder RM, M power and RM power.

11.2 Accessing

Access step-bystep

Step	Description
1.	Turn on the instrument by pressing the 🐠 key.
2.	Level up the instrument. Refer to "5.2 Instrument Setup" for more infor- mation.
3.	Press 📼 until DATA mode is active.

Example of a data management screen

CONFI	G)THE0)PR0G	DATA		
Job	:			DEFAULT		
Туре	:			Fixpoint()		
Pt	:			P†0011 ()	RS232	To set the communication
E	:			25.000 m		parameters.
N	:			-4.700 m	POINTS	To access the point
н	:			0.500 m		management.
RS2	32	Р	DINTS	JOB	Јов	To access the Job manage-
						ment.

Field	Description
<job:></job:>	The current active job name.
<Туре:>	Fixpoint, Measurement and Result
<pt:></pt:>	The active identifier for points.
<e:></e:>	Easting coordinate
<n:></n:>	Northing coordinate
<h:></h:>	Height

11.3	Jobs				
Description	Jobs are a summary of different types of data e.g. fixpoints, measurements, result, etc. The job definition consists of the input of job name, operator and remark. Additionally, the system generates time and date at the time of creation.				
Active job	The active job is the one in which data is stored to. One job is always considered the active job.				
Default job	A job called Default is always available on the instrument. The job Default is active until a user defined job is created and selected.				
Create a new job	Step	Description			
step-by-step		Make sure that DATA Mode is active.			
	1.	Press JOB to access job management.			
	2.	Press NEW to create a new job.			
	3.	Enter new job name.			
	4.	Accept with OK .			
		The new job is set as active job.			

Data Management Mode, for	
Builder RM, M power and RM powe	r

140

View and select a job step-by-step

Description
Make sure that DATA Mode is active.
Press JOB to access job management.
Press \circledast to toggle through the jobs and select job.
Accept with OK .
The selected job is set as active job.

Delete a job stepby-step

Step	Description
	Make sure that DATA Mode is active.
1.	Press JOB to access job management.
2.	Press \longleftrightarrow to toggle through the jobs and select job.
3.	Press DELETE .
4.	Accept with YES .
(tab)	The selected job is deleted. Data is not recoverable.

11.4 Fixpoints

Description Fixpoints contain at least a point identifier, easting and northing or height.

Fixpoints can be

- created, viewed and deleted in the field
- downloaded for data transfer to a further program
- uploaded, for example for stakeout operations

Create a new fixpoint step-bystep

Step	Description
	Make sure that DATA Mode is active.
1.	Press 🌔 to set <type:> Fixpoint</type:> .
2.	Press POINTS to access point management.
3.	Press NEW PT to create a new fixpoint.
4.	Enter point identifier, easting, northing and/or height.
5.	Accept with OK .
(a)	The new point is created.

Data Management Mode, for	
Builder RM, M power and RM powe	r

142

View a fixpoint step-by-step

Step	Description
	Make sure that DATA Mode is active.
1.	Press 🄶 to set <type:> Fixpoint</type:> .
2.	Press 🤤 to set focus on <pt:></pt:> .
3.	Press \bigcirc to toggle through the points.
(and	The coordinates are displayed on same screen.

Delete a fixpoint step-by-step

Step	Description
	Make sure that DATA Mode is active.
1.	Press 🄶 to set <type:> Fixpoint</type:> .
2.	Press 🤤 to set focus on <pt:></pt:> .
3.	Press \longleftrightarrow to toggle through the points and select point.
4.	Press POINTS to access point management.
5.	Press DELETE to delete point.
6.	Accept with YES .

Step	Description
	The selected point is deleted. Data is not recoverable.

11.5 Measurements

Description Measurement data contains at least horizontal angle, vertical angle, horizontal distance, slope distance, height difference, data, time and if applicable, line, offset, easting, northing and height coordinates.

Measurement data can be:

- viewed
- deleted
- downloaded for data transfer to a further program

View a measurement step-by-step

Step	Description
	Make sure that DATA Mode is active.
1.	Press 🄶 to set <type:> Measurement</type:> .
2.	Press 🤤 to set focus on <pt:></pt:> .
3.	Press 🄶 to toggle through the points.
	The coordinates are displayed on same screen.
4.	Press POINTS to access point management.
(B)	Measurement values are displayed.
Delete a measurement step-by-step

Step	Description
al and a second	Make sure that DATA Mode is active.
1.	Press 🌔 to set <type:> Measurement</type:> .
2.	Press 🤤 to set focus on <pt:></pt:> .
3.	Press \longleftrightarrow to toggle through the points and select point.
4.	Press POINTS to access point management.
5.	Press DELETE to delete point.
6.	Accept with YES .
(and the second	The selected point is deleted. Data is not recoverable.
(B)	Deleting measurements is not available for application programs Tie Distance and Area because of the result calculation.

Data Management N Builder RM, M power	lode, for r and RM	power Builder 146			
11.6	Result				
Description Result data contains a result identifier and the dif application. The applications from which these result and Tie Distance. Result data can be: • viewed • downloaded for data transfer to a further pro-		ata contains a result identifier and the different values depending on the ion. The applications from which these result data can be displayed are Area Distance . ata can be: yed ynloaded for data transfer to a further program			
View a result step-	Step	Description			
by-step	(B)	Make sure that DATA Mode is active.			
	1.	Press 🔶 to set <type:> Result</type:> .			
	2.	Press 🤤 to set focus on <res.></res.> .			
	3.	Press 🔶 to toggle through the results.			
	(B)	The first three rows of the result are displayed on the same screen.			
	4.	Press VIEW to access result management.			
		Result values are displayed.			

Parameters
1

Description Data can be stored in internal memory or to an external device such as PDA, Data Collector or PC through the RS232 interface.

For data transfer between instrument and external device the communication parameters of the serial interface RS232 must be set.

Example of a communication parameter screen

CONFIG)THEO)PR0G	DATA
Data Output:		lnt. Mem. ()
Baudrate :		19200 ()
Databits :		8()
Parity :		None ()
Endmark :		CR ()
Stopbits :		1
	0K	

Field	Option	Description
Data Output	RS232	Data is recorded via the serial interface. For this purpose, a data storage device must be connected.
	Int. Mem.	All data is recorded in the internal memory.
Baudrate	2400, 4800, 9600, or 19200	Frequency of data transfer from receiver to device in bits per second.
Databits		Number of bits in a block of digital data.
	7	Set automatically if <parity:> Even</parity:> or Odd .
	8	Set automatically if <parity:> None</parity:> .
Parity	None, Even or Odd	Error checksum at the end of a block of digital data.
Endmark	CR/LF	The terminator is a carriage return followed by a linefeed.
	CR	The terminator is a carriage return.
Stopbits	1	Number of bits at the end of a block of digital data.

Standard RS232

Standard RS232 is supported by default.

Field	Option
Baudrate	19200
Databits	8
Parity	None
Endmark	CR/LF
Stopbits	1

Set communication parameters stepby-step

Step	Description
	Make sure that DATA Mode is active.
1.	Press RS232 to access communication parameter setting.
2.	Press $\hat{\bigcirc}$ to set focus on desired field.
3.	Press \longleftrightarrow to toggle through the settings and select desired field.
4.	Accept with OK .
	The setting is overtaken.

11.8 Data Transfer

Description

For data transfer use:

 Construction Data Manager Simple office software which supports the exchange of Leica TPS data with the PC, using a Windows® application.

OR

• Leica Geo Office Tools Office software including a series of programs which supports working with the Builder RM, M power and RM power.

11.9 Pin Assignment

Port at the instrument

Diagram	Pin	Name	Description	Direction
	а	PWR_IN	Power input: + 12 V nominal (11 - 16 V)	In
	b	-	Not used	-
	c	GND	Single ground	-
	d	Rx	RS232, receive	In
a e	e	Тх	RS232, transmit	Out

EDM Settings		Builder 1	152
12	EDM Settings		
12.1	EDM		
Description With the instrument different settings are available for measurements with (without reflectors) and fine/fast (with reflectors). The LED on the keyboard cates the selected type. Depending on the selected type the selection of prism is different. Red dot contains the flat prism as the only one and isn't display. Beside the settings of the EDM it is possible to set the reflector height.			
(B	Descriptions apply only to Builder M power and RM power.		
Access step-by-	Step	Description	
step	1.	Turn on the instrument by pressing the 🌒 key.	
	2.	Press the 🖝 key.	
	(Lag	 EDM settings are not accessible during the following: CONFIG Mode: Choice list is opened. THEO Mode: Level or orientation procedure is running. PROG Mode: "YES or NO" decision, for example "Station and Orient tion will be changed and set" or Point List Search is running. DATA Mode: One of the procedures RS232, POINTS or JOB is runnir 	ta- ng.

Step	Description
3.	Make desired settings.
4.	Accept with OK .



Description of fields

Field	Option	Description
<edm type:=""> fine</edm>		Fine measuring type for high precision measure- ments with prisms.
	fast	Quick measuring type with higher measuring speed and reduced accuracy.

EDM Settings

Field	Option	Description
	red dot	For distance measurements without prisms (only Builder RM power).
<laser mode:=""></laser>	Off	Turns off the visible laser beam.
(only Builder RM	On	Turns on the visible laser beam.
poner,	Off&Track	Turns on continuous distance measure mode.
	On&Track	Turns on continuous distance measure mode and visible laser beam.
<tracking:></tracking:>	Off	Turns off continuous distance measure mode.
(only Builder M power)	On	Turns on continuous distance measure mode.
<prism type:=""></prism>	TrueZero	CPR111 BUILDER Prism, True-Zero Offset
	JpMini	Sliding Mini Prism
	Mini	Leica Mini Prism
	Round	Standard Leica Prism
	Flat Prism	CPR105 Flat Prism
	Таре	Reflective Tape
	User	User can define his own prism.

Field	Option	Description	
<prism const.:=""></prism>		Entry of a user specific prism constant in [mm].	
<hr:></hr:>		Entry of reflector height.	

EDM Settings	Builder 15		
12.2	PPM		
Description	This option enables the entry of a scale factor. Measured values and coordinates are corrected with the PPM parameter.		are
	Descriptions apply only to Builder M power and RM power.		
Access step-by-	Step	Description	
step	1.	Make sure that EDM Settings is active.	
	2.	Press 🖝 for approximately 5 seconds.	
	3.	Enter the PPM parameter.	
	4.	Accept with OK .	
	-		



Description of fields

Field	Description	
<scale factor:=""></scale>	Calculated scale factor.	
(Scale ppm:) Entry of PPM value to calculate scale factor.		

model.

13 System Info and Instrument Protection

13.1 System Info

Description

The System Info is used for:

- checking system and software information
- performing the calibrations of the instrument errors

(P

Access step-bystep

Step	Description
1.	Turn on the instrument by pressing the $lacksquare$ key.
(B)	Make sure that THEO mode is active.
2.	Press 📖 for approximately 5 seconds.

Descriptions apply in general to all Builder models. Available options depend on the

Example of a	SYS	TEM INFO		
system info screen	Battery :	60%		
	lnstr.Temp.∶	20 °C	CALIBR	To access the calibration
	Serial Nr. :	199380		routine. Refer to chapter
	Instr.Type :	RM)		"14 Check & Adjust".
	Language :	English	PIN	To access PIN-code
	Lang.Dlg. :	Off)		settings.
	CALIBR	PIN SW Info	SW Info	To access software infor- mation.

Description of fields

Field	Description	
<battery:></battery:>	Remaining battery power (e.g. 60%).	
<instr.temp.:></instr.temp.:>	Measured instrument temperature in ° C.	
(Serial Nr.:) Serial number of the instrument.		

1	6	n
Ŧ	υ	υ

Field	Description	
<instr.type:></instr.type:>	An alternative instrument type can be selected to reduce the software functionality, e.g. for demonstration purpose. For Builder RM power the instrument type M power, RM, R and T may be chosen as an alternative. For Builder M power the instrument type T may be chosen as an alternative. For Builder RM the instrument type R and T may be chosen as an alternative. For Builder R the instrument type T may be chosen as an alternative. For Builder R the instrument type T may be chosen as an alternative. For Builder T this choice is not available.	
<language:></language:>	The current loaded language(s) are shown.	
Clang.Dialog:> If two languages are loaded onto the instrument a dia choose the language can be shown directly after swi on the instrument. Con> The language dialog is shown as startup dialo Coff> The language dialog is not shown as startup		

13.2 Instrument Protection (PIN)

Description

The instrument can be protected by a **P**ersonal Identification **N**umber. If the PIN protection is activated, the instrument will always prompt for a PIN code entry after starting up. As soon as the PIN was activated the access to the PIN code settings requires the PIN. If a wrong PIN has been typed in five times, a **P**ersonal **U**nblocKing code is required which can be found on the instrument delivery papers. If the PUK code was entered correctly, the PIN code is set to default value "0" and the PIN protection is deactivated.

Activate PIN code step-by-step

Step	Description
1.	Turn on the instrument by pressing the 🌒 key.
en)	Make sure that THEO mode is active.
2.	Press 回 for approximately 5 seconds.
3.	Press PIN to access PIN code settings.
4.	Activate PIN by setting <use pin-code="">: On</use> .
5.	Enter your desired personal PIN Code (max. 6 character numeric) in <new pin-code="">:</new> .
6.	Accept with OK .

Step	Description
	Now the instrument is protected against unauthorized use. After switching on the instrument or re-enter in the PIN settings the PIN code entry is necessary.

Deactivate PIN code step-by-step

Step	Description
1.	Turn on the instrument by pressing the 🌒 key.
	Make sure that THEO mode is active.
2.	Press 🧰 for approximately 5 seconds.
3.	Enter your personal PIN in <pin-code>:</pin-code> .
4.	Accept with OK .
5.	Deactivate PIN by setting <use pin-code="">: Off</use> .
6.	Accept with OK .
(B)	Now the instrument isn't protected anymore against unauthorized use.



Description of fields

Field	Option	Description
<use pin-code:=""></use>	On Off	To activate PIN-code. To deactivate PIN-code.
<new pin-code:=""></new>		To enter your personal PIN-code (max. 6 char- acter numeric).

Check & Adjust Builder		164
14	Check & Adjust	
14.1	Overview	
Description	Leica instruments are manufactured, assembled and adjusted to the best possible quality. Quick temperature changes, shock or stress can cause deviations and decrease the instrument accuracy. It is therefore recommended to check and adjust the instrument from time to time. This can be done in the field by running through specific measurement procedures. The procedures are guided and have to be followed carefully and precisely as described in the following chapters. Some other instrument errors and mechanical parts can be adjusted mechanically.	
Electronic adjust- ment	The following instrument errors can be checked and adjusted electronI, tCompensator longitudinal and transversal index errorsiVertical index error, related to the standing axiscHz collimation error, also called line of sight errorEvery angle measured in the daily work is corrected automatically if the and the Hz-correction are activated.	ically: compensator
Mechanical adjust- ment	The following instrument parts can be adjusted mechanically:Circular level on instrument and tribrachLaser plummet	

- Screws on tripod
- Visible red laser beam for Builder R, RM and RM power. Only Leica Geosystems authorized service workshops are entitled to adjust these products.
- Vertical line of the reticule for Builder T

During the manufacturing process, the instrument errors are carefully determined and set to zero. As mentioned above, these errors can change and it is highly recommended to redetermine them in the following situations:

- Before the first use
- Before every high precision survey
- After rough or long transportations
- After long working periods
- After long storage periods
- If the temperature difference between current environment and the temperature at the last calibration is more than 20°C

Check & Adjust

ŝ

(B

S

Builder

14.2 Preparation



Before determining the instrument errors, the instrument has to be levelled-up using the electronic level.

The tribrach, the tripod and the underground should be very stable and secure from vibrations or other disturbances.



The instrument should be protected from direct sunlight in order to avoid thermal warming.

It is also recommended to avoid strong heat shimmer and air turbulence. The best conditions are usually early in the morning or with overcast sky.

Before starting to work, the instrument has to become acclimatised to the ambient temperature. Approximately two minutes per °C of temperature difference from storage to working environment but at least 15 min should be taken into account.

Combined Adjustment of Hz Collimation (c), Vertical Index (i) and Compensator Index (I, t) Errors

Description

14.3

The combined adjustment procedure determines the following instrument errors in one process:

Туре	Description	Diagram
с	The Hz collimation error (c) is also called line of sight error. It is caused by the deviation between the optical line of sight, which means the direction in which the crosshairs points and the line perpendicular to the tilting axis. This error affects all Hz readings and increases with steep sight- ings.	 a) Tilting axis b) Line perpendicular to tilting axis c) Hz collimation error (c), also called line of sight error d) Line of sight

Туре	Description	Diagram
i	A vertical index error (i) exists, if the 0° mark of the vertical circle reading doesn't coincide with the mechanical vertical axis of the instrument, also called standing axis. The vertical index error (i) is a constant error that affects all vertical angle read- ings.	 a) Mechanical vertical axis of the instrument, also called standing axis b) Axis perpendicular to the vertical axis c) V = 90° reading d) Vertical index error
l, t	Compensator longitudinal (I) and transversal (t) index errors	

Combined adjustment procedure step-by-step

The following table explains the most common settings. Refer to the stated chapter for more information on screens.

Step	Description
1.	Turn on the instrument by pressing the 🌰 key.
2.	Level up the instrument. Refer to "5.2 Instrument Setup" for more infor- mation.
	Make sure that THEO mode is active.
3.	Press log for approximately 5 seconds until SYSTEM INFO is active.
4.	Press CALIBR .
5.	Press NEW .
6.	Aim with the telescope accurately at a target at a distance of about 100 m. The target must be positioned within \pm 5° of the horizontal plane.

Step	Description
7.	Press MEASURE to measure the target.
8.	Change telescope position and aim with the telescope again to the target. Change telescope again to the target.
9.	Press MEASURE to measure the same target again and to calculate the instrument errors.
	The old and new adjustment results are shown.
10.	Press SET to set new adjustment data. OR Press ෩ to quit without setting the new adjustment data.

Set Hz correction				
(c)	Field	Option	Field Description	
	<hz-correction:></hz-correction:>	On	The horizontal angles are corrected for the line of sight and if < Compensator: On > transversal tilt errors.	
		Off	Horizontal angles are not corrected. After switching on the instrument, the setting is automatically reset to <hz- Correction: On >.</hz- 	

Check & Adjust	Builder	
14.4	Adjustment of the Circular Level	

On the instrument step-by-step



Step	Description
1.	Level up the instrument in advance with the electronic level, assuming that the electronic level is correctly adjusted.
2.	The bubble must be centered. If it extends beyond the circle, use the allen keys supplied to centre it with the adjustment screws. Turn the instrument slowly 200 gon (180°). Repeat the adjustment procedure if the bubble does not stay centered.
	After the adjustment, no screw shall be loose.

172

On the tribrach step-by-step



Step	Description
1.	Level up the instrument with the electronic level, assuming that the elec- tronic level is correctly adjusted. Refer to "5.2 Instrument Setup" for more information. Then remove it from the tribrach.
2.	The bubble of the tribrach must be centered. If it extends beyond the circle, use the adjusting pin in conjunction with the two cross headed adjustment screws to centre it.
(ag	After the adjustment, no screw shall be loose.

Check & Adjust	Builder	174
14.5	Adjustment of the Laser Plummet	
(F	The laser plummet is located in the vertical axis of the instrument. Unc conditions of use, the laser plummet does not need adjusting. If an ad necessary due to external influences, the instrument has to be returned Geosystems authorized service workshop.	ler normal justment is I to any Leica



Step	Description
1.	Setup the instrument on a tripod (1) approximately 1.5 m above ground.

Step	Description			
2.	Turn on the instrument by pressing the 🌰 key.			
3.	Level up the instrument with the electronic level. Refer to "5.2 Instrument Setup" for more information.			
	Inspection of the laser plummet should be carried out on a bright, smooth and horizontal surface, such like a sheet of paper.			
4.	Mark the centre of the red dot on the ground (2).			
5.	Slowly turn the instrument through 360°, carefully observing the move- ment of the red laser dot (3).			
(ag	The maximum diameter of the circular movement described by the centre of the laser point should not exceed 3 mm at a distance of 1.5 m.			
6.	If the centre of the laser dot describes a perceptible circular movement or moves more than 3 mm away from the point which was first marked, an adjustment may be required. Inform your nearest Leica Geosystems authorized service workshop.			

Depending on brightness and surface, the diameter of the laser dot can vary. At a distance of 1.5 m it is about 2.5 mm.

Service of the Tripod

Service tripod step-by-step

14.6



Step	Description
(a)	The connections must be firm and tight.
1.	Moderately tighten the allen screws with the allen key supplied with the tripod.
2.	Tighten articulated joints just enough to keep the tripod legs open when lifting the tripod of the ground.
3.	Tighten the screws of the tripod legs.

Check & Adjust	Builder	178
14.7	Inspection of the Red Laser Beam, for Builder R- RM power	, RM- and
General	The red laser beam used for measuring is arranged coaxially with the li the telescope, and emerges from the objective port. If the instrument adjusted, the red measuring beam coincides with the visual line of sig influences such as shock, stress or large temperature fluctuations can red measuring beam relative to the line of sight.	ne of sight of is well ht. External displace the
() B	The direction of the beam should be inspected from time to time, beca sive deviation of the laser beam from the line of sight can result in impr measurements.	ause an exces- ecise distance
Inspecting of the red laser beam step-by-step		

Step	Description			
1.	Set up the provided CPR105 flatprism between 5 m and 20 m with the reflective tape side facing the instrument.			
2.	Align the instrument crosshairs to the centre of the flatprism.			
3.	Switch on the red laser beam by activating the laser pointer function in Configuration Mode.			
4.	Without using the telescope inspect the position of the red laser dot on the flatprism. C Look at the flatprism from just above the telescope or from just to the side of it.			
5.	If the dot is within the inner printed circle the laser beam is within toler- ance. If it is outside it is recommended to have the laser beam realigned by a Leica Geosystems authorized service workshop.			

Check & Adjust		Builder	180
14.8	Adjus Build	tment of the Vertical Line of the Reticule, for er T	
Inspection			
	Step	Description	
	1.	Aim on any point in the centre of the reticule.	
	2.	With the vertical drive move the instrument upwards to the edge of range of vision.	the

(P

If the point moves along the vertical line no adjustment is necessary.
Adjusting





Step	Description
1.	If the point does not move along the vertical line remove cover of adjusting screws on the eyepiece.
2.	With the help of the supplied tool loosen all four adjusting screws by the same amount.
3.	Turn the reticule until the vertical line is aligned with the point.
4.	Subsequently, tighten the adjusting screws and repeat the checking proce- dure until adustment is correct.

Builder	182
Care and Transport	
Transport	
 When transporting the equipment in the field, always make sure that you either carry the product in its original transport container, or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright. 	
Never carry the product loose in a road vehicle, as it can be affected by shock vibration. Always carry the product in its transport container and secure it.	and
When transporting the product by rail, air or sea, always use the complete orig Leica Geosystems packaging, transport container and cardboard box, or its equilent, to protect against shock and vibration.	inal iiva-
When transporting or shipping batteries, the person in charge of the product mensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or free transport company.	nust eight
	Builder Care and Transport Transport When transporting the equipment in the field, always make sure that you • either carry the product in its original transport container, • or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright. Never carry the product loose in a road vehicle, as it can be affected by shock vibration. Always carry the product in its transport container and secure it. When transporting the product by rail, air or sea, always use the complete orig Leica Geosystems packaging, transport container and cardboard box, or its equ lent, to protect against shock and vibration. When transporting or shipping batteries, the person in charge of the product n ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or fructransport company.

Field adjustment After transport inspect the field adjustment parameters given in this user manual before using the product. If the equipment is to be stored for a long time, remove the alkaline batteries from the product in order to avoid the danger of leakage.

Care and Transport	Builder	184
15.2	Storage	
Product	Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "17 Technical Data" for information about temperature limits.	
Field adjustment	After long periods of storage inspect the field adjustment parameters give user manual before using the product.	en in this
NiMH and Alkaline batteries	 Refer to "17.3 General Technical Data of the Instrument" for information abortstorage temperature range. A storage temperature range of 0°C to +20°C / +32°F to +68°F in dry environment is recommended to minimize self-discharging of the battery. At the recommended storage temperature range, batteries containing a 10% 50% charge can be stored for up to one year. After this storage period the batteries must be recharged. Remove batteries from the product and the charger before storing. After storage recharge batteries (NiMH) before using. Protect batteries from damp and wetness. Wet or damp batteries must be drie before storing or use. 	

15.3	Cleaning and Drying
------	---------------------

Objective, eyepiece and prisms	 Blow dust off lenses and prisms. Never touch the glass with your fingers. Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components. For cleaning the flat prism pure alcohol is not allowed.
Fogging of prisms	Reflector prisms that are cooler than the ambient temperature tend to fog. It is not enough simply to wipe them. Keep them for some time inside your jacket or in the vehicle to allow them to adjust to the ambient temperature.
Damp products	Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C / 104°F and clean them. Do not repack until everything is completely dry.
Cables and plugs	Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

Safety Directions	Builder	L 86
16	Safety Directions	
16.1	General	
Description	The following directions should enable the person responsible for the product, a the person who actually uses the equipment, to anticipate and avoid operational hazards.	nd I
	The person responsible for the product must ensure that all users understand the directions and adhere to them.	ese

16.2Intended Use

Permitted use

- Measuring horizontal and vertical angles.
- Measuring distances.
- Recording measurements.
- Computing by means of software.
- Visualizing the aiming direction and vertical axis.

Adverse use

- Use of the product without instruction.
- Use outside of the intended limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is specifically permitted for certain functions.
- Modification or conversion of the product.
- Use after misappropriation.
- Use of products with obviously recognizable damages or defects.
- Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems.
- Aiming directly into the sun.
- Inadequate safeguards at the working site, for example when measuring on roads.

Safety Directions	Builder	188
	 Deliberate dazzling of third parties. Controlling of machines, moving objects or similar monitoring a additional control- and safety installations. 	application without
Warning	Adverse use can lead to injury, malfunction and damage. It is the task of the person responsible for the equipment to info hazards and how to counteract them. The product is not to be ope has been instructed on how to work with it.	rm the user about rated until the user

16.3 Limits of Use

Environment Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.

Danger Local safety authorities and safety experts must be contacted before working in hazardous areas, or in close proximity to electrical installations or similar situations by the person in charge of the product.

Safety Directions	Builder 19) 0
16.4	Responsibilities	
Manufacturer of the product	Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the user manual and origin accessories, in a completely safe condition.	s- al
Manufacturers of non Leica Geosystems accessories	The manufacturers of non Leica Geosystems accessories for the product are respor sible for developing, implementing and communicating safety concepts for their products, and are also responsible for the effectiveness of those safety concepts in combination with the Leica Geosystems product.	
Person in charge of the product	 The person in charge of the product has the following duties: To understand the safety instructions on the product and the instructions in the user manual. To be familiar with local regulations relating to safety and accident prevention To inform Leica Geosystems immediately if the product and the application becomes unsafe. 	ıe ı.
≜ Warning	The person responsible for the product must ensure that it is used in accordance wit the instructions. This person is also accountable for the training and the deploymen of personnel who use the product and for the safety of the equipment in use.	:h 1t

16.5	Hazards of Use
Marning Warning	The absence of instruction, or the inadequate imparting of instruction, can lead to incorrect or adverse use, and can give rise to accidents with far-reaching human, material, financial and environmental consequences.
	All users must follow the safety directions given by the manufacturer and the direc- tions of the person responsible for the product.
Caution	Watch out for erroneous measurement results if the product has been dropped or has been misused, modified, stored for long periods or transported. Precautions: Periodically carry out test measurements and perform the field adjustments indicated in the user manual, particularly after the product has been subjected to abnormal use and before and after important measurements

Builder	192
Because of the risk of electrocution, it is very dangerous to use poles and extension in the vicinity of electrical installations such as power cables or electrical railways Precautions: Keep at a safe distance from electrical installations. If it is essential to work in the environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.	ons s. nis stal-
If the product is used with accessories, for example masts, staffs, poles, you ma increase the risk of being struck by lightning. Precautions: Do not use the product in a thunderstorm.	y
Be careful when pointing the product towards the sun, because the telescope futions as a magnifying glass and can injure your eyes and/or cause damage inside the product. Precautions: Do not point the product directly at the sun	inc- the
	Builder Ended Because of the risk of electrocution, it is very dangerous to use poles and extension in the vicinity of electrical installations such as power cables or electrical railways Precautions: Keep at a safe distance from electrical installations. If it is essential to work in the environment, first contact the safety authorities responsible for the electrical installations and follow their instructions. Image:

Warning	During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic. Precautions: The person responsible for the product must make all users fully aware of the existing dangers.
Marning Warning	Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations. Precautions: Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.
Warning	If computers intended for use indoors are used in the field there is a danger of elec- tric shock. Precautions: Adhere to the instructions given by the computer manufacturer with regard to field use in conjunction with Leica Geosystems products.

Safety Directions	Builder	194
Caution	If the accessories used with the product are not properly secured and the subjected to mechanical shock, for example blows or falling, the product damaged or people may sustain injury. Precautions: When setting-up the product, make sure that the accessories are correct fitted, secured, and locked in position. Avoid subjecting the product to mechanical stress.	e product is may be ly adapted,
A Caution	During the transport, shipping or disposal of batteries it is possible for ina mechanical influences to constitute a fire hazard. Precautions: Before shipping the product or disposing of it, discharge the batteries by a product until they are flat. When transporting or shipping batteries, the person in charge of the pro- ensure that the applicable national and international rules and regulation observed. Before transportation or shipping contact your local passenge transport company.	appropriate running the oduct must ns are r or freight
Warning	Using a battery charger not recommended by Leica Geosystems can dest batteries. This can cause fire or explosions. Precautions: Only use chargers recommended by Leica Geosystems to charge the bat	troy the teries.

Warning	High mechanical stress, high ambient temperatures or immersion into fluids can cause leackage, fire or explosions of the batteries. Precautions: Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.
▲ ^{Warning}	Short circuited battery terminals can overheat and cause injury or fire, for example by storing or transporting in pockets if battery terminals come in contact with jewellery, keys, metallized paper or other metals. Precautions: Make sure that the battery terminals do not come into contact with metallic objects.
Marning	If the product is improperly disposed of, the following can happen:
—	 If polymer parts are burnt, poisonous gases are produced which may impair health.
	 If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
	 By disposing of the product irresponsibly you may enable unauthorized persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:



The product must not be disposed with household waste. Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorized personnel.

Product specific treatment and waste management information can be downloaded from the Leica Geosystems home page at http://www.leica-geosystems.com/treatment or received from your Leica Geosystems dealer.

Only Leica Geosystems authorized service workshops are entitled to repair these products.



16.6 Laser Classification

General The following directions (in accordance with the state of the art - international standard IEC 60825-1 (2007-03) and IEC TR 60825-14 (2004-02)) provide instruction and training information to the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

Products classified as laser class 1, class 2 and class 3R do not require

- · laser safety officer involvement,
- protective clothes and eyewear,
- special warning signs in the laser working area

if used and operated as defined in this user manual due to the low eye hazard level.

Products classified as laser class 2 or class 3R may cause dazzle, flash-blindness and afterimages, particularly under low ambient light conditions.

Safety Directions	Builder	198			
16.6.1	Integrated Distancer, Measurements with Red Dot (only for Builder RM power)				
General	The EDM incorporated into the product produces a visible red laser beam when emerges from the telescope objective.	hich			
	The laser product described in this section, is classified as laser class 3R in a ance with: • IEC 60825-1 (2007-03): "Safety of laser products".	accord-			
	Class 3R laser products: Direct intrabeam viewing may be hazardous (low-level eye hazard), in partic deliberate ocular exposure. The risk of injury for laser class 3R products is lin because of:	ular for mited			
	 a) unintentional exposure would rarely reflect worst case conditions of (e.g alignment with the pupil, worst case accommodation, 	;.) beam			

- b) inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- c) natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value	
Maximum average radiant power	5.00 mW	
Pulse duration	800 ps	
Pulse repetition frequency	100MHz - 150MHz	
Wavelength	650 nm - 690 nm	
Beam divergence	0.2 mrad x 0.3 mrad	
NOHD (Nominal Ocular Hazard Distance) @ 0.25s	80 m / 263 ft	

Marning 🔨

From a safety perspective class 3R laser products should be treated as potentially hazardous.

Precautions:

Prevent direct eye exposure to the beam. Do not direct the beam at other people.

Marning Warning

Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces etc. **Precautions:**

Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections. Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laserpointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.





16.6.2Integrated Distancer, Measurements with Fine/Fast (only
Builder M power and RM power)

General

 \odot

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 1 in accordance with:

• IEC 60825-1 (2007-03): "Safety of laser products".

Class 1 laser products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this user manual.

Description	Value
Maximum average radiant power	0.33 mW
Pulse duration	800 ps
Pulse repetition frequency	100 MHz - 150 MHz
Wavelength	650 nm - 690 nm

Labelling



a) Laser beam

Safety Directions	Builder	204				
16.6.3	Integrated Distancer, Visible Laser (only Builder R and RM)					
General	The EDM module built into the product produces a emerges from the telescope objective.	a visible red laser beam which				
	 The laser product described in this section, is class with: IEC 60825-1 (2007-03): "Safety of laser products: Class 2 laser products: These products are safe for momentary exposure erate staring into the beam. 	ified as laser class 2 in accordance ucts". s but can be hazardous for delib-				
	Description	Value				
	Maximum average radiant power	1.00 mW				
	Pulse duration	800 ps				
	Pulse repetition frequency	100 MHz				
	Wavelength	620 nm - 690nm				

A Warning

From a safety perspective class 2 laser products are not inherently safe for the eyes. **Precautions:**

Avoid staring into the beam or pointing the beam at other people.



a) Laser beam

Safety Directions	Builder			
16.6.4	Laser Plummet			
General	The laser plummet built into the product produces a visible emerges from the bottom of the product.	e red laser beam which		
	 The laser product described in this section, is classified as l with: IEC 60825-1 (2007-03): "Safety of laser products". 	aser class 2 in accordance		
	Class 2 laser products: These products are safe for momentary exposures but car erate staring into the beam.	n be hazardous for delib-		
	Description	Value		
	Maximum average radiant power	1.00 mW		
	Pulse duration	C.W.		
	Pulse repetition frequency	C.W.		
	Wavelength	620 nm - 690nm		
Warning	From a safety perspective class 2 laser products are not in Precautions: Avoid staring into the beam or pointing the beam at other	herently safe for the eyes. r people.		



a) Will be replaced by a Class 3R warning label if applicable



16.7	Electromagnetic Compatibility EMC
Description	The term Electromagnetic Compatability is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.
Marning Warning	Electromagnetic radiation can cause disturbances in other equipment.
	Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.
▲ Caution	There is a risk that disturbances may be caused in other equipment if the product is used in conjunction with accessories from other manufacturers, for example field computers, personal computers, two-way radios, non-standard cables or external batteries.
	Use only the equipment and accessories recommended by Leica Geosystems. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers and two-way radios, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

Safety Directions	Builder	210
Caution	Disturbances caused by electromagnetic radiation can result in error ments. Although the product meets the strict regulations and standards wh	neous measure- ich are in force
	in this respect, Leica Geosystems cannot completely exclude the pos product may be disturbed by very intense electromagnetic radiation, near radio transmitters, two-way radios or diesel generators. Precautions:	sibility that the , for example,
	Check the plausibility of results obtained under these conditions.	
Murning Warning	If the product is operated with connecting cables attached at only o ends, for example external supply cables, interface cables, the perm electromagnetic radiation may be exceeded and the correct function products may be impaired. Precautions:	ne of their two itted level of ning of other
	While the product is in use, connecting cables, for example product battery, product to computer, must be connected at both ends.	to external

16.8 FCC Statement, Applicable in U.S.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Marning Warning

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.

Safety Directions

Labelling



17 Technical Data

17.1 Angle Measurement

Accuracy

Туре	Standard devi ISO 17123-3	ation Hz, V,	Display least count		
	["]	[mgon]	["]	[mgon]	
100	9	2.8	1	1	
200	6	1.8	1	1	
200 (Builder M power and RM power)	5	1.5	1	0.1	
300	3	1	1	0.1	

()

Type 300 is only available for the Builder RM power.

Characteristics

Absolute, continuous.

17.2 Distance Measurement

Reflectorless standard range

Туре		Kodak Gray	Range D		Range E		Range F	
		Card	[m]	[ft]	[m]	[ft]	[m]	[ft]
\bigcirc	Standard	White side, 90 % reflective	60	200	80	260	80	260
Ø	Standard	Grey side, 18 % reflective	30	100	50	160	50	160
\bigcirc	Standard	White side, 90 % reflective	140	460	170	560	>170	>560
\bigcirc	Standard	Grey side, 18 % reflective	70	230	100	330	>100	>330

Technical Data	Builder		
Reflector range	Range of measurement flat prism CPR105:	1.5 m to 250 m	
(red dot)	Display unambiguous:	Up to 250 m	

Туре		CPR105	Range D		Range E		Range F	
			[m]	[ft]	[m]	[ft]	[m]	[ft]
Ć	Standard	Reflective tape	150	490	150	490	150	490
(\mathbf{A})	Standard	Cat-eye	250	820	250	820	250	820
	Standard	Reflective tape	150	490	170	560	170	560
(\circ)	Standard	Cat-eye	250	820	250	820	250	820

Atmospheric conditions

- D: Object in strong sunlight, severe heat shimmer
- E: Object in shade, sky overcast
- F: Underground, night and twilight

Accuracy

Standard measuring	Standard deviation, ISO 17123-4	Measure time, typical [s]
Standard Reflectorless	3 mm + 2 ppm	3.0
Standard measuring	Standard deviation, ISO 17123-4	Measure time, typical [s]
--	------------------------------------	---------------------------
CPR105 Flat prism (Cat-eye)	5 mm + 2 ppm	< 2
CPR105 Flat prism (Reflective tape)	3 mm + 2ppm	< 2
Tracking	5 mm + 2 ppm	1.0

Object in shade, sky overcast.

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy.

The display resolution is 1 mm.

Reflector range (fine/fast mode)

Range of measurement : 1.5 m to 3500 m

Type Rang		lange 1		Range 2		Range 3	
	[m]	[ft]	[m]	[ft]	[m]	[ft]	
CPR111 BUILDER prism, true-zero offset	450	1500	800	2600	1000	3500	
Round prism	1800	6000	3000	10000	3500	12000	

Technical Data	Builder 2			
<u>ل</u>	The range on the round prism is only achievable with the upgrad urement. Otherwise the specifications of the CPR111 are valid (mrefer to "5.4 Distance Measurement".	ed distance meas- ax. 1000 m). Please		
Atmospheric condi- tions	 Strong haze, visibility 5km; or strong sunlight, severe heat Light haze, visibility about 20km; or moderate sunlight, sli Overcast, no haze, visibility about 40km; no heat shimmer 	: shimmer ght heat shimmer		

Accuracy

Standard measuring	Standard deviation, ISO 17123-4	Measure time, typical [s]
Fine	2 mm + 2 ppm	< 1
Fast	5 mm + 2 ppm	< 0.5
Tracking	5 mm + 2ppm	< 0.3

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy.

Characteristics	Measuring system: Type: Carrier wave:	System analyser basis 100 MHz - 150 MHz Coaxial, visible red laser class 1 660 nm
Laser dot size	Distance [m]	Laser dot size, approximately [mm]
	at 20	10 x 12
	at 50	13 x 21

38 X 85

at 250

Technical Data		I	Builder				220
17.3	General Teo	General Technical Data of the Instrument					
Telescope Type			Builder	۲		Builder R, and RM po	RM, M power ower
	Magnification		30 x			30 x	
	Clear objective diameter		40 mm			40 mm	
	Focusing		1.6 m/5.2 ft to infinity			1.7 m/5.6 ft to infinity	
	Field of view		1°21′/1 2.4 m a	50 gon it 100 m		1°30′/1.66 2.6 m at 10	gon)0 m
Compensator	Туре	Settin	ig accura	су	Set	ting range	
		["]		[mgon]	[']		[gon]
	100	2		0.7	4		0.07
		-					

Туре	Setting accuracy		Setting range	
	["]	[mgon]	[']	[gon]
100	2	0.7	4	0.07
200	2	0.7	4	0.07
300	2	0.7	4	0.07

Level

Circular level sensitivity: 6'/2 mm Electronic level resolution: 6" (=20^{cc})

Control unit	Display: Keyboard: Angle Displa Distance Di Position:	ay: splay:	280 x 160 pixels, monochrome, graphics capable LCD, illumination 7 keys / 20 keys (only Builder M power and RM power) 360°''', 360° decimal, 400 gon, 6400 mil, V % m, ft int, ft us, ft inch 1/16 In both faces, face two is optional
Instrument Ports, Builder BM	Port	Name	Description
M power and RM power only	Port 1	Port 1	5 pin LEMO-0 for power and/or communication.This port is located at the base of the instrument.



Recording, Builder	Builder Data can be recorded into internal memory.						
RM power only	Туре	Capacity [kB] Number of databloc					
	Internal memory	576	10000				
Laser plummet	Type: Location: Accuracy:	Visible red laser class 2 In vertical axis of instrument Deviation from plumbline: 1.5 mm at 1.5 m instrument	: height				
	Diameter of laser point:	2.5 mm at 1.5 m instrument	height				
Drives	Туре:	Endless horizontal and verti	cal drives				
Power, Builder RM, M power and RM power only	External supply voltage:	Nominal voltage 12.8 V DC,	Range 11.5 V-13.5 V				
Battery adapter	Type: Voltage: Typical operating time:	Alkaline GAD39 Adapter: 6 x AA (1.5 6 - 8 h (> 400 angle and dis > 12 h (angle measurement	V) LR6 tance measurements))				

Technical Data		Builder	224
Battery GEB121	Type: Voltage: Typical operating time	NiMh 6V :: 6 - 8h (approx. 9000 ang	gle and distance measurements)
External battery, Builder RM, M power and RM power only	Type: Voltage: Capacity: Typical operating time	NiMH 12 V GEB171: 8.0 Ah :: 20 - 24 h	
Environmental	Temperature		
specifications	Туре	Operating temperature [°C]	Storage temperature [°C]
	Builder	-20 to +50	-40 to +70
	Protection against d	ust, sand and water	
	There a	Dura ta atlan	

Туре	Protection
Builder	IP54 (IEC 60529)

Humidity

Туре	Protection
Builder	Max 95 % non condensing The effects of condensation are to be effectively counter- acted by periodically drying out the instrument.

Reflectors

tions

Туре	Additive Constant [mm]
CPR105 Flat prism (Cat-eye)	0.0
CPR105 Flat prism (reflective tape)	0.0
Reflectorless	0.0
GZM28 reflective tape 60x60 mm	0.0
CPR111 BUILDER prism, true-zero offset	0.0

Automatic correc- The following automatic corrections are made:

- Line of sight error
- Tilting axis error
- Earth curvature

- Compensator index error
- Vertical index error
- Refraction

Builder

18 International Limited Warranty, Software License Agreement

International
Limited WarrantyThis product is subject to the terms and conditions set out in the International
Limited Warranty which you can download from the Leica Geosystems home page at
http://www.leica-geosystems.com/internationalwarranty or collect from your Leica
Geosystems distributor. The foregoing warranty is exclusive and is in lieu of all other
warranties, terms or conditions, express or implied, either in fact or by operation of
law, statutory or otherwise, including warranties, terms or conditions of merchanta-
bility, fitness for a particular purpose, satisfactory quality and non-infringement, all
of which are expressly disclaimed.

Software License Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online pursuant to prior authorization from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software License Agreement, which covers aspects such as, but not limited to, Scope of the License, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software License Agreement. Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at http://www.leica-geosystems.com/swlicense or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software License Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such License Agreement. If you do not agree to all or some of the terms of such License Agreement, you may not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the dealer from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Index

Builder

Index

Α

Accuracy	8
Adjustment	
Combined adjustment (I, t, c, i)16	7
Electronic16	4
Mechanical16	4
Of circular level on tribrach17	3
Of the laser plummet17	4
ALL-in-18	2
Angle & Distance10	7
Angle measurement21	4
Angle unit6	4

Application	
Angle & Distance	
Area (tilt) & Volume	
As Built	
COGO	
Hidden Point	99
Layout	
Layout Line/Arc/Spiral	
Measure & Descriptor	99
Tie Distance	
Applications	
Area	112
As Built application	104
Auto Off	63
Automatic corrections	

В

Battery	.35,	47,	223
Baudrate			148
Веер			61

C Combined167 Communication parameters147 Compensator index167 Construction Data Manager150

Data output148 Date67 Display heater64 Displayed data18 Documentation12 Construction made faster 13 Quickguide13 User Manual12 Drives 223 Е

EDM	50
Electromagnetic compatibility	209
Electronic adjustment	164
Electronic level	71
Endmark	148
Environmental specifications	224

D

Index	Buil	der 23	30
F		J	
FCC Statement	211	Job	39
Fixpoints1	141	κ	
н		Keyboard Builder M power and RM power2	29
Hazards of use1	191	Keyboard Builder T, R and RM2	28
Height	.96		
Height Transfer	. 97	L	
Hidden Point1	115	Language	38
Horizon	. 59	Laser	
Horizontal angle15, 36,	71	Beam17	78
Horizontal circle	. 15	Classification19) 7
How to use this manual	.12	Distancer5	50
Hz Collimation1	167	Plummet44, 71, 22	23
Hz Increment	.58	Pointer	58
		Layout10)0
1		Layout Line/Arc/Spiral12	28
Icons	.35	Leica Geo Office Tools15	50
Instrument2	220	Level	20
Components	. 23	Light3	30
Dimensions2	222	Limits of use18	39
Models	. 20	Line of sight1	15
Temperature1	159		
Intended use1	187		
Interface 1	147		

м

Manual

Available documentation	
Description of manuals	12
How to use	12
Validity of user manual	12
Measure	82
Measure & Descriptor	134
Measurements	144
Mechanical adjustment	
Memory	
Minimum reading	65

0

Operating temperature	
-----------------------	--

Ρ

Parity	148
Plumb line	16
Points	141, 144
Ports	
Power supply	25

Prism	225
CPR105 Flat Prism	54
CPR111 Builder Prism	55
Programs	

R

Range	215
Record	63, 82, 223
Reflectors	225
Responsibilities	190
Reticle	17
Reticle illumination	30
Reticule adjustment	180

S

Safety directions	
Screen	32
Sector beep	61
Service, tripod	177
Set contents	21
Set horizontal angle	71, 73
Setting	68
Shifting Line Startpoint	89

Index Buil	der 232
Software concept 26 Stake out 98 Standing axis 15	Tribrach173 Tripod40, 177
Station setup84Stopbits148Storage184	Unit
Storage temperature 224 Symbols 3, 36 System Info 30, 158	V V Setting59 Vertical angle15, 36, 72
T Tab bar	Vertical circle
Technical terms 14 Telescope 220 Temperature 224	Weight222
Instrument	Zenith17, 59 Zenith angle15
Tillting axis 15 Time 67 Tracking 58, 154 Transport 182	

Total Quality Management: Our commitment to total customer satisfaction.



Leica Geosystems AG, Heerbrugg, Switzerland, has been certified as being equipped with a quality system which meets the International Standards of Quality Management and Quality Systems (ISO standard 9001) and Environmental Management Systems (ISO standard 14001).

Ask your local Leica dealer for more information about our TQM program.

Leica Geosystems AG

Heinrich-Wild-Strasse CH-9435 Heerbrugg Switzerland Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

